




8. DISASSEMBLY ILLUSTRATION & PARTS LIST

8. DISASSEMBLY ILLUSTRATION & PARTS LIST

8-1 OUTDOOR UNIT

Model : AJ*144LALH (Revision Code : None & A)


AJ*126LALH (Revision Code : None & A)

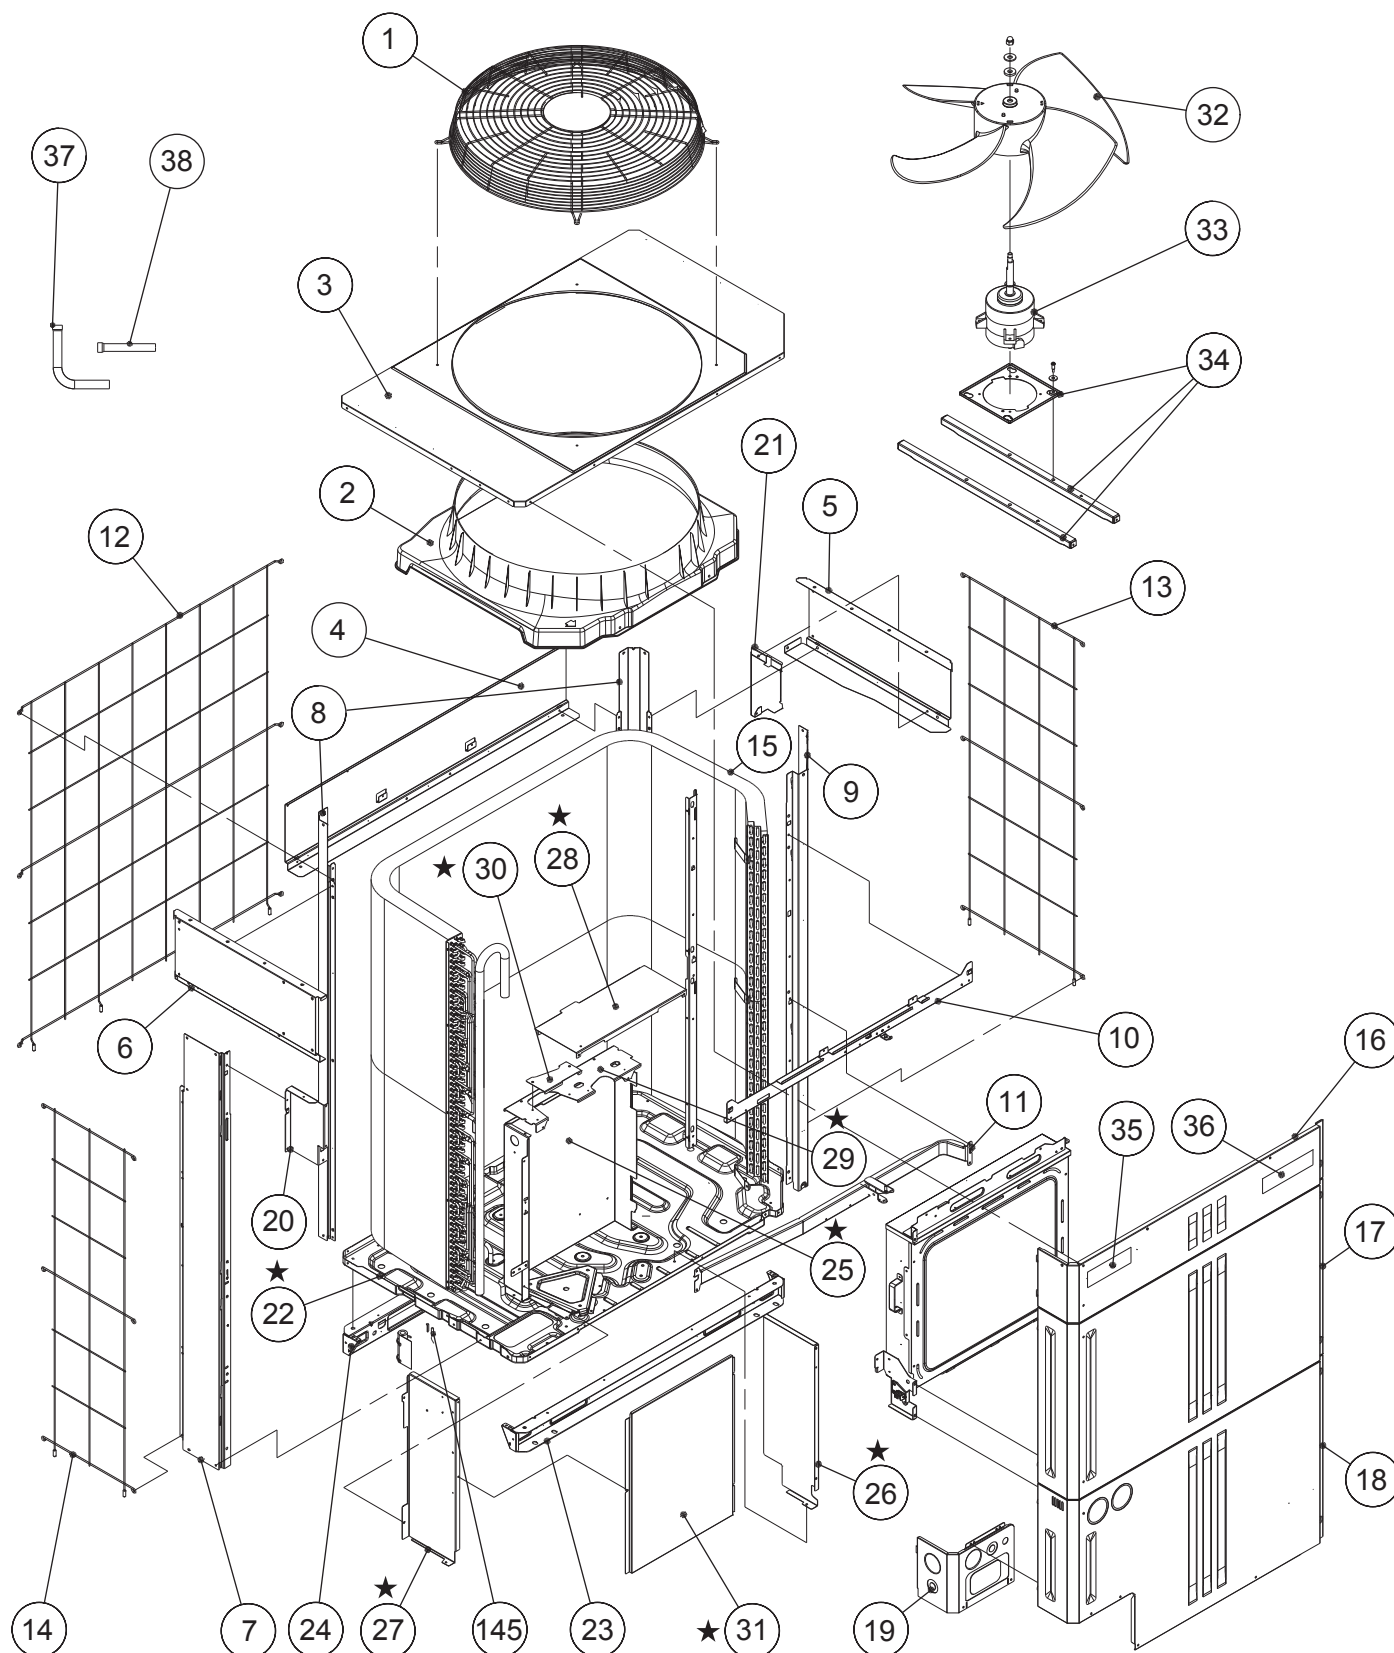

Caution :

"★" marked parts vary depending on "Revision code".


Model : AJ*144LALH (Revision Code : B)
AJ*126LALH (Revision Code : B)

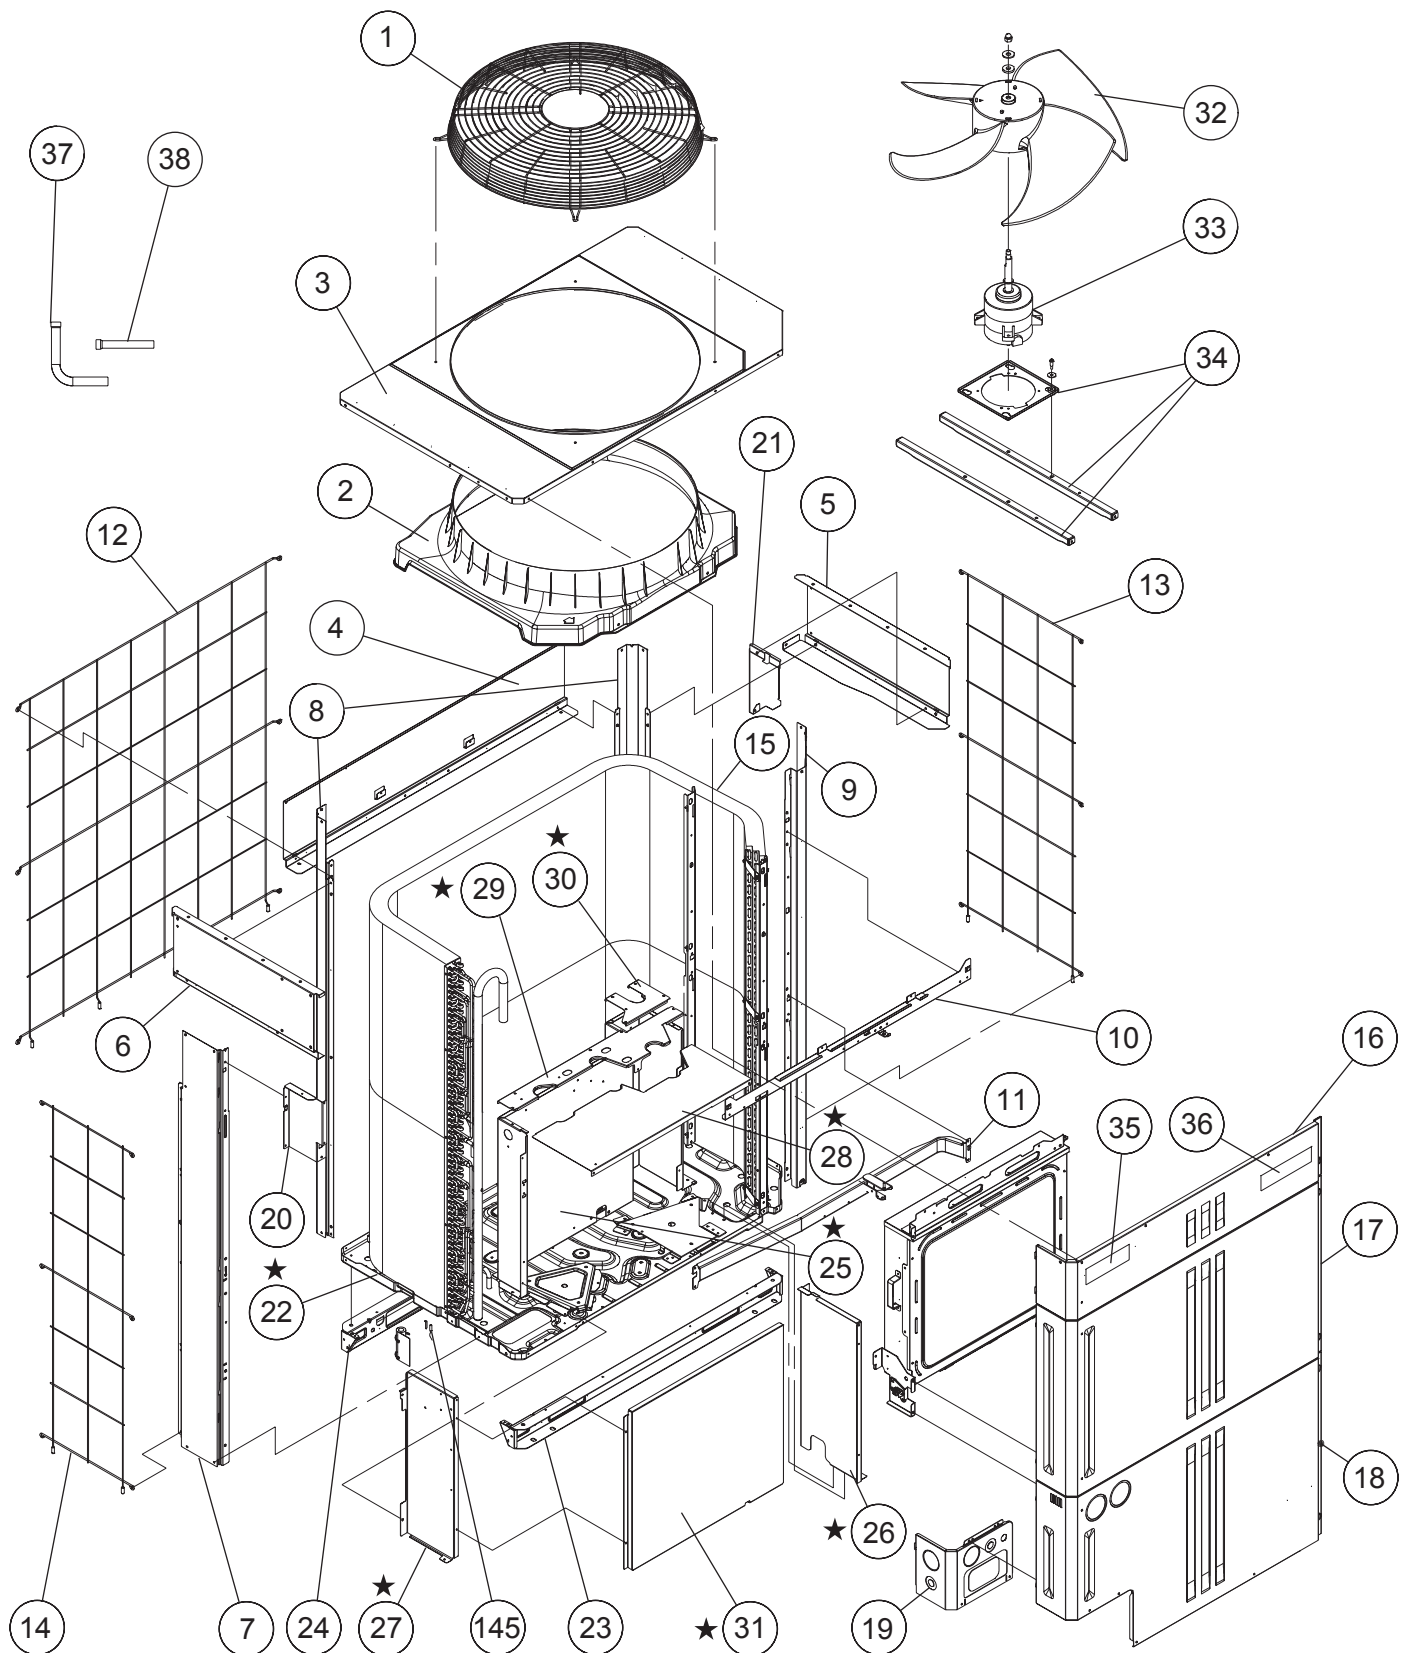


Caution :

"★" marked parts vary depending on "Revision code".

Model : AJ*144LALH (Revision Code : None & A & B)
AJ*126LALH (Revision Code : None & A & B)

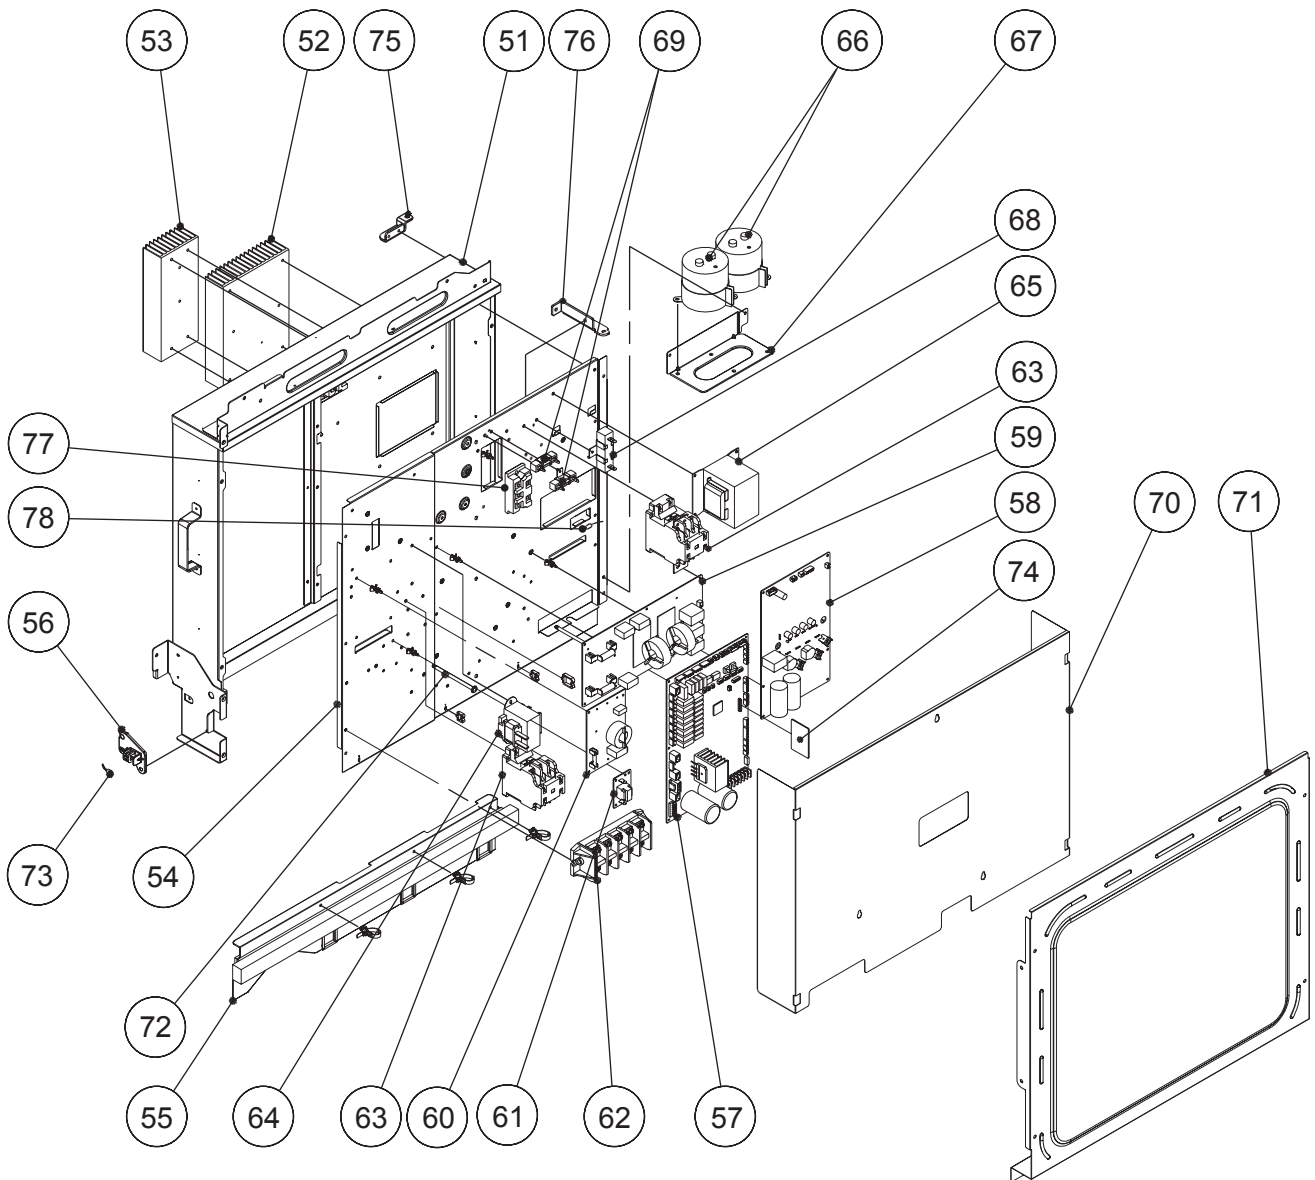


Model : AJ*144LALH (Revision Code : None & A)
 AJ*126LALH (Revision Code : None & A)

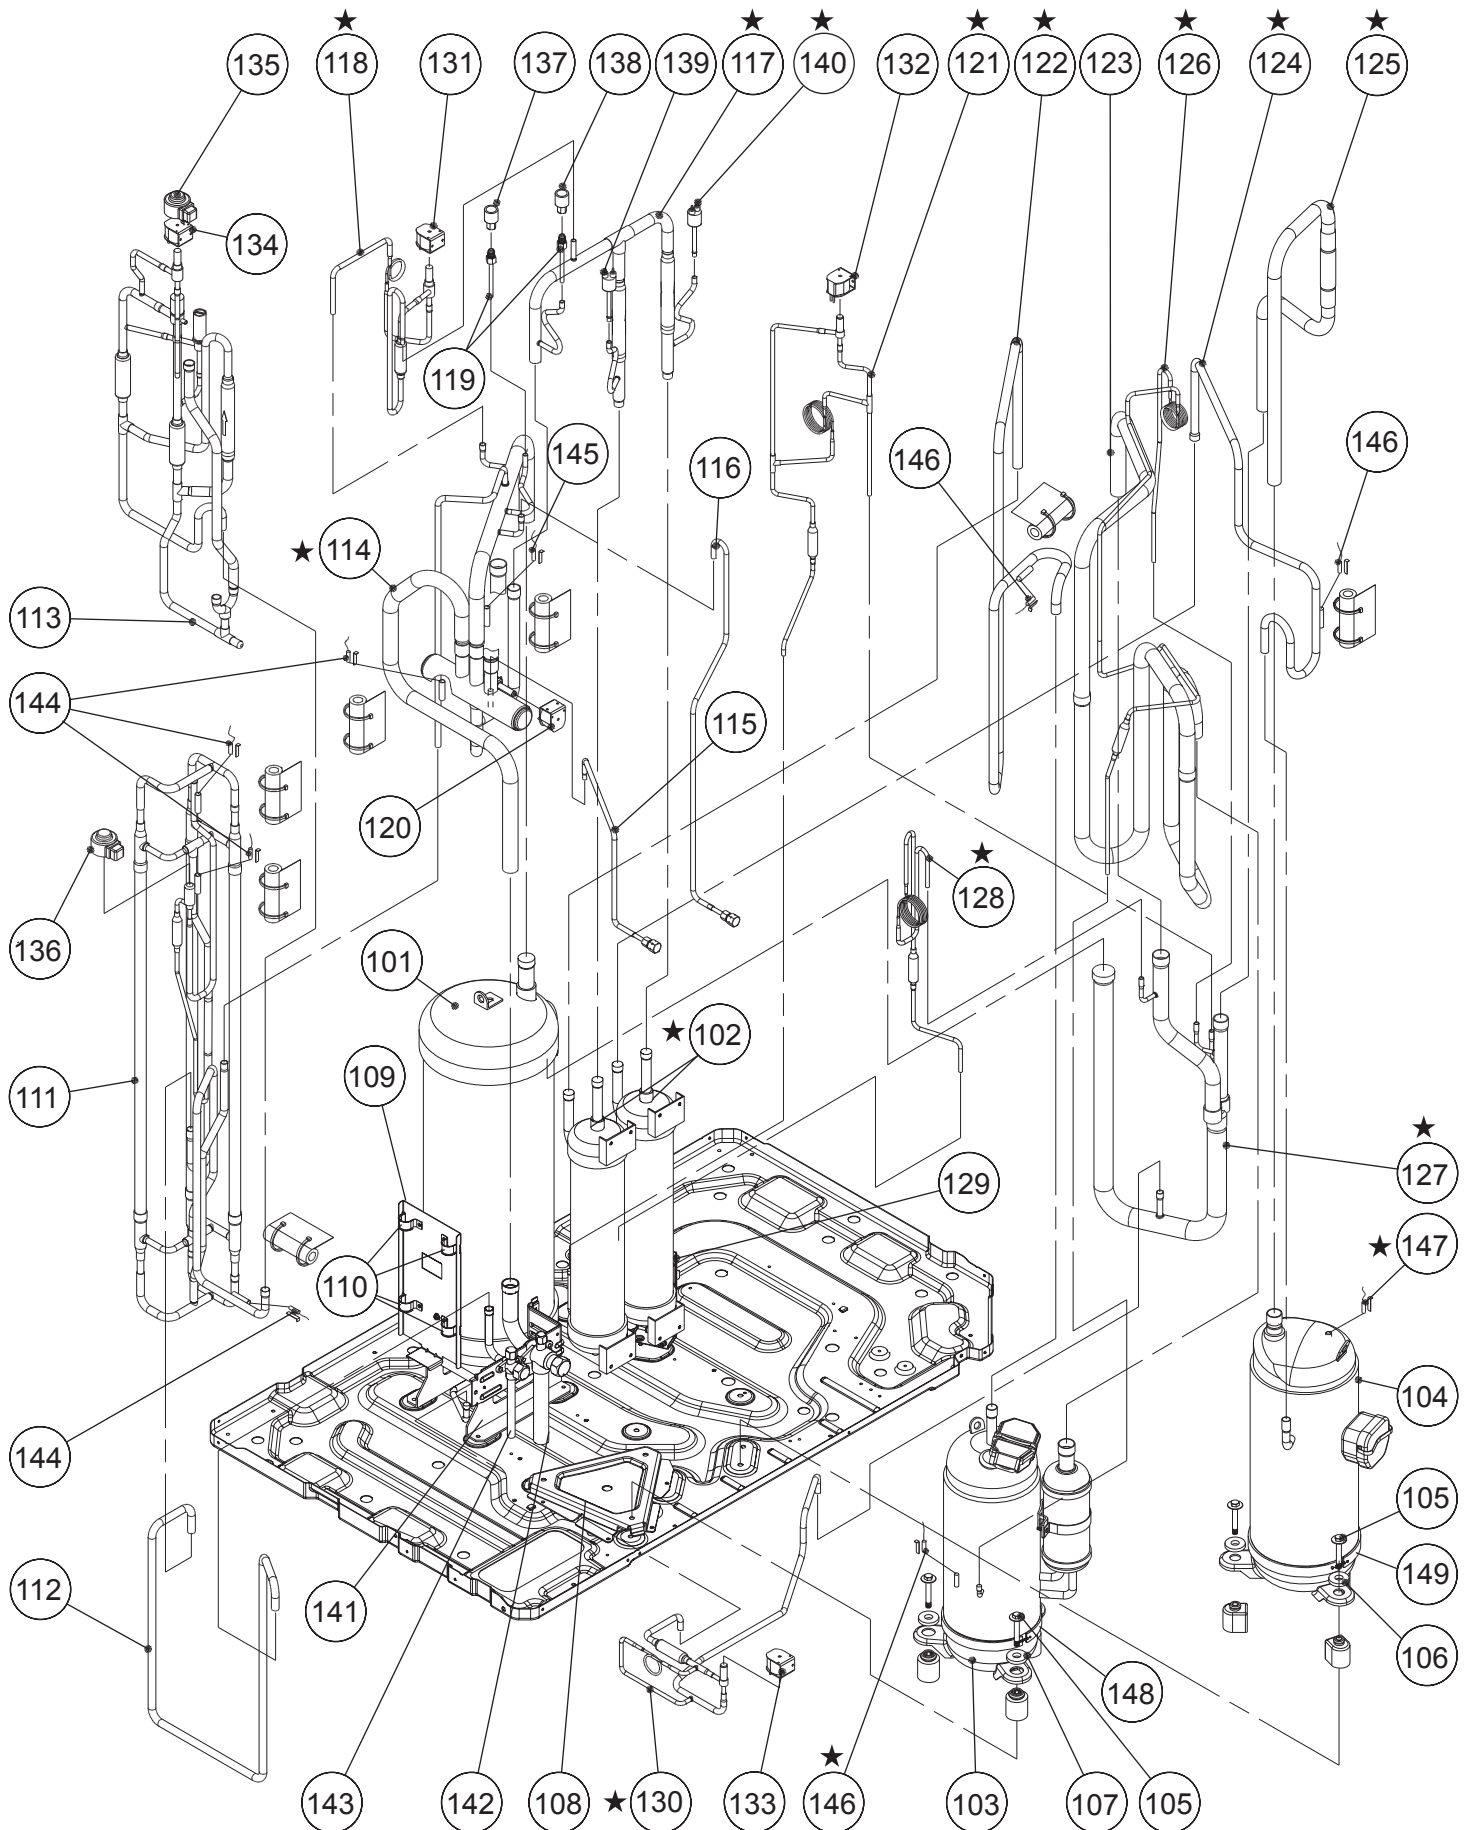

Caution :

"★" marked parts vary depending on "Revision code".

Model : AJ*144LALH (Revision Code : B)
 AJ*126LALH (Revision Code : B)

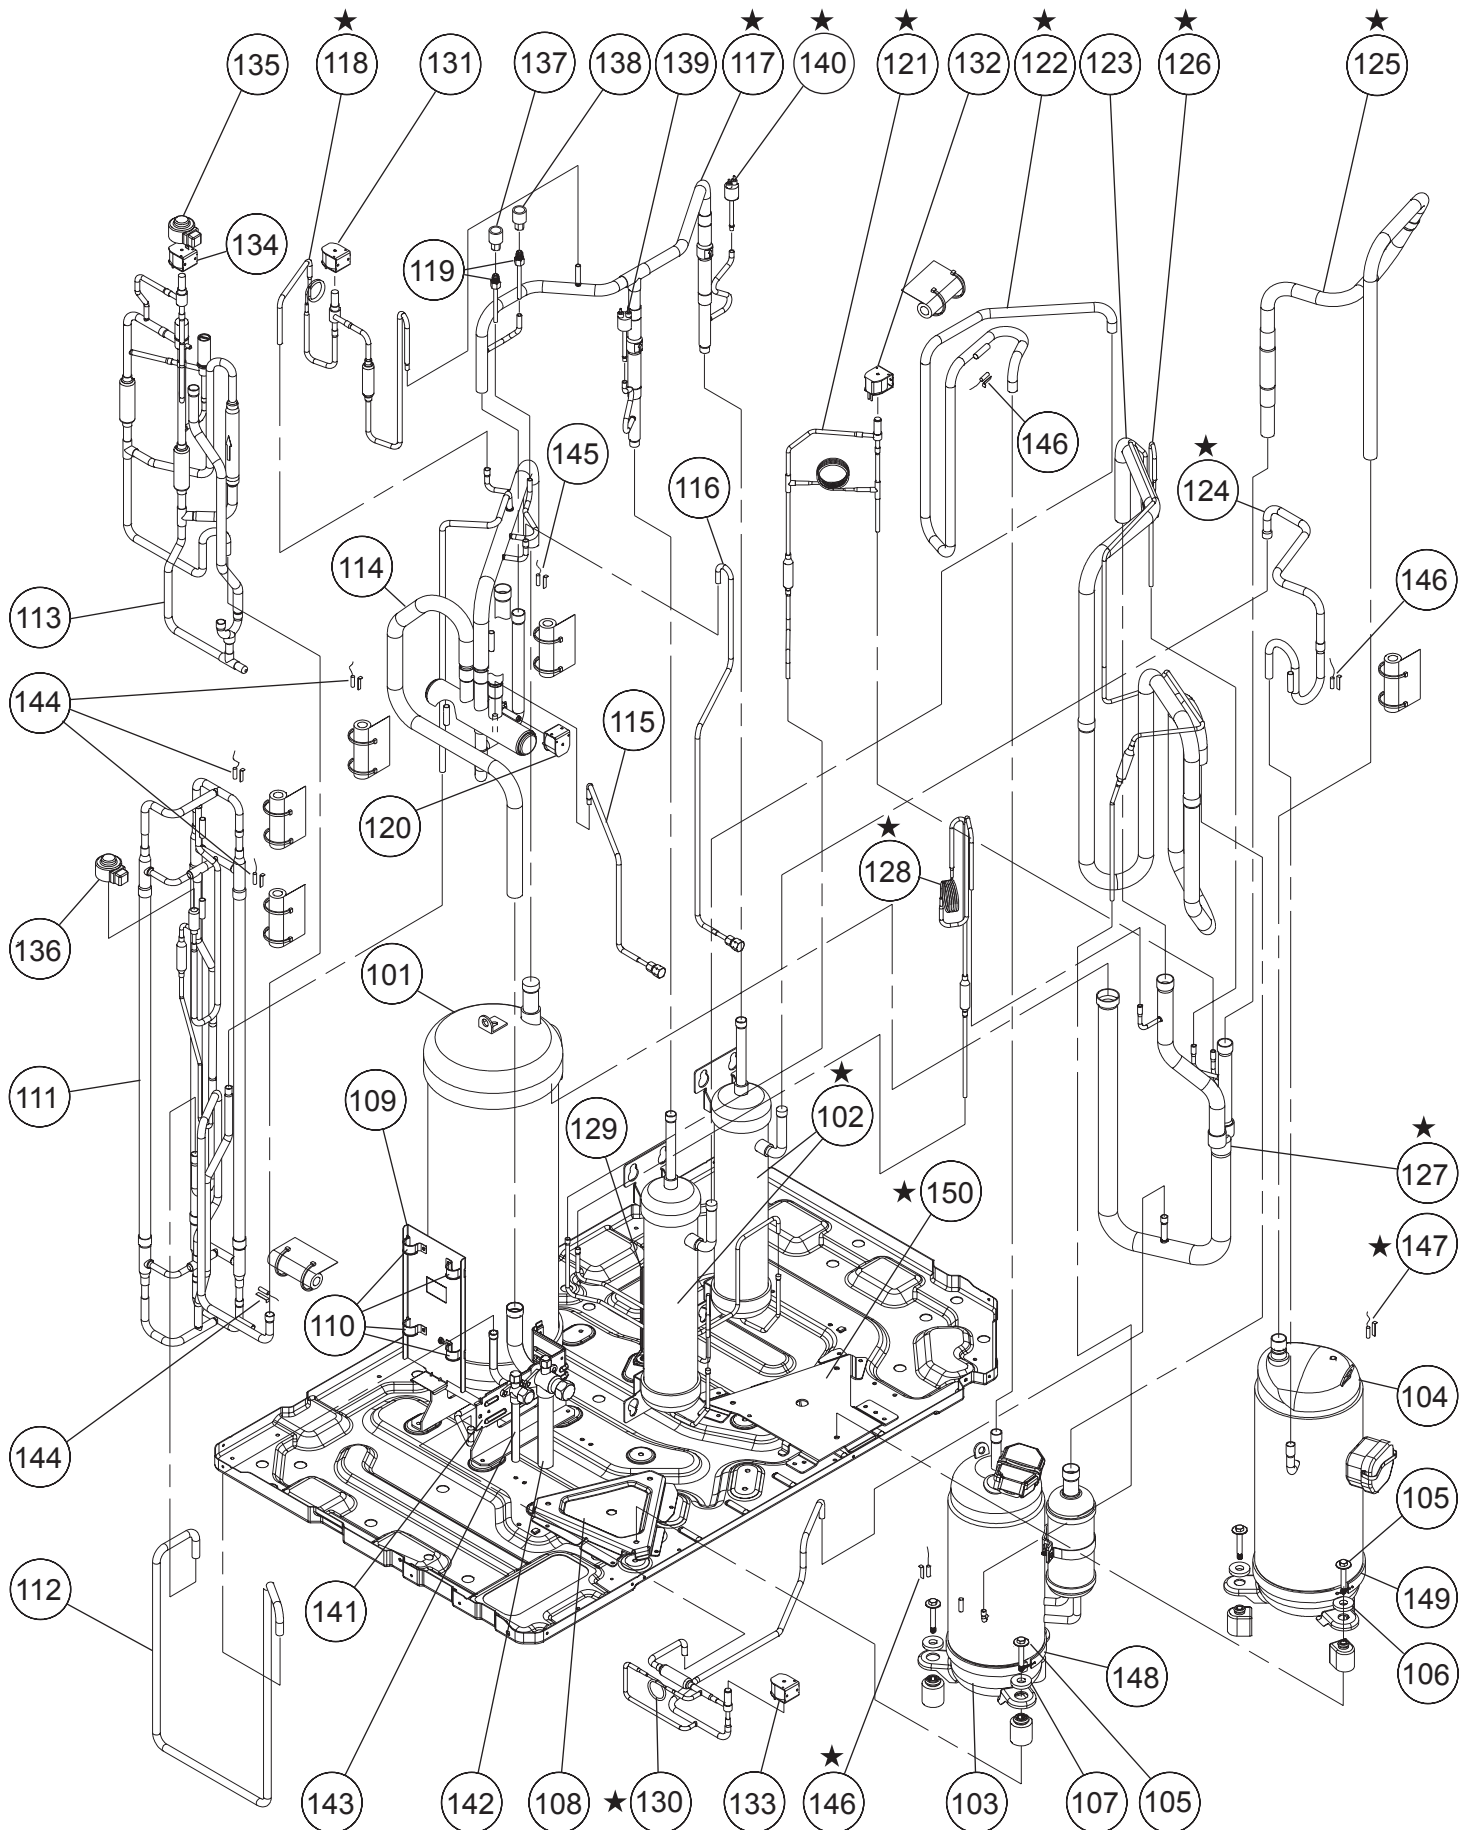

Caution :

"★" marked parts vary depending on "Revision code".

Model : AJ*144LALH (Revision Code : None & A & B)
AJ*126LALH (Revision Code : None & A & B)

Ref No.	Description	Part No.		
		Revision Code None	Revision Code A	Revision Code B
1	FAN GUARD	9378498006	←	←
2	BELL MOUTH	9379709002	←	←
3	TOP PANEL L	9378491007	←	←
4	REAR PANEL L ASSY	9378921009	←	←
5	RIGHT PANEL ASSY	9378920002	←	←
6	LEFT PANEL ASSY	9378919006	←	←
7	SIDE PILLER ASSY	9379202008	←	←
8	REAR PILLER	9378472006	←	←
9	MAIN PILLER	9378468009	←	←
10	FRONT BEAM L ASSY	9378922006	←	←
11	CENTER BEAM L ASSY	9378924000	←	←
12	NET REAR L ASSY	9378926035	←	←
13	NET RIGHT ASSY	9378927018	←	←
14	NET LEFT ASSY	9378928015	←	←
15	CONDENSER L ASSY	9379053006	←	←
16	FRONT PANEL L	9378480001	←	←
17	S PANEL TOP L ASSY	9380231004	←	←
18	S PANEL BTM L ASSY	9380232001	←	←
19	CONDUIT PLATE	9378493018	←	←
20	BRACKET BEAM	9378473003	←	←
21	BRKT CORNER ASSY	9378923003	←	←
22	BASE L ASSY	9378454002	←	9378454033
23	BASE FOOT FL ASSY	9378856004	←	←
24	BASE FOOT RL ASSY	9378856028	←	←
25	COMP BOX BASE S ASSY	9378914018	←	None
	COMP BOX BASE L ASSY	None	←	9378914049
26	COMP BOX R ASSY	9378916005	←	9378916012
27	COMP BOX L ASSY	9378915008	←	9378915015
28	COMP BOX TOP ASSY	9378917002	←	9378917040
29	COMP BOX ROOF L ASSY	9379061001	←	9379061032
30	ROOF PLATE ASSY	9379203005	←	None
	ROOF OS ASSY	None	←	9379203029
31	COMP BOX COVER ASSY	9378918009	←	9378918016
32	PROPELLER FAN	9378488007	←	←
33	MOTOR,DC BRUSHLESS	9602663002	←	←
34	MOTOR BRKT ASSY	9378925007	←	←
35	LABEL(FUJITSU)	9380477006	←	←
	LABEL(GENERAL)	9378949003	←	←
36	LABEL(AIRSTAGE)	9380479000	←	←
37	ACCESSORY PIPE(GAS) A-L	9379200028	←	←
38	ACCESSORY PIPE(GAS) B-L	9379200004	←	←


Model : AJ*144LALH (Revision Code : None & A & B)
AJ*126LALH (Revision Code : None & A & B)

Ref No.	Description	Part No.		
		Revision Code None	Revision Code A	Revision Code B
51	CONTROL BOX ASSY	9378500006	←	←
52	HEAT SINK B	9378511019	←	←
53	HEAT SINK C	9378511026	←	←
54	PCB PLATE	9378508019	←	←
55	WIRE PLATE ASSY	9378929043	←	←
56	THERMO HOLDER	9378510005	←	←
57	MAIN PCB ASSY	9707755015	←	←
58	INVERTER PCB ASSY (TRANSISTOR PCB ASSY)	9707952018	←	←
59	FILTER PCB(INV) ASSY	9707754018	←	←
60	FILTER PCB(MAIN) ASSY	9707753011	←	←
61	PWB UNIT(CT)	9707710014	←	←
62	TERMINAL	9900251031	←	←
63	MAGNETIC RELAY	9363277005	←	←
64	REACTOR(DC FAN) ASSY	9900468019	←	←
65	REACTOR(INV) ASSY	9900467012	←	←
66	CAPACITOR	9704268037	←	←
67	BRKT(CAPACITOR)	9379183000	←	←
68	RESISTOR,CEMENT	0200441016	←	←
69	RESISTOR,CEMENT	0200444017	←	←
70	PROTECT SHEET	9379181020	←	←
71	CNT COVER ASSY	9378930001	←	←
72	SCREW WASHER(STEP)	9379153010	←	←
73	OUTDOOR TEMP THERMISTOR	9900747015	←	←
74	COMMUNICATION PCB	9707774023	←	←
75	BRACKET HIG TOP	9378840003	←	←
76	BRACKET HIG BTM	9378845008	←	←
77	DIODE BRIDGE	0001113013	←	←
78	HEATSINK THERMISTOR	9900518004	←	←

Model : AJ*144LALH (Revision Code : None & A & B)
AJ*126LALH (Revision Code : None & A & B)


Ref No.	Description	Part No.		
		Revision Code None	Revision Code A	Revision Code B
101	ACCUMULATOR ASSY	9379221009	←	←
102	OIL SEPARATOR ASSY	9379038010	←	9379677004
103	COMPRESSOR(INV) ASSY	9379228008	←	←
104	COMPRESSOR(AC) ASSY	9379228015	←	←
105	COMP BOLT	9378474017	←	←
106	WASHER(RUBBER) C	9379055000	←	←
107	WASHER(RUBBER) I	9379179003	←	←
108	COMP PLATE ASSY (INV COMP)	9379134019	←	←
109	BRACKET(SUB COOL HEX)	9378518018	←	←
110	CLAMP 19	9378519015	←	←
111	SUB COOL HEX B ASSY	9378749122	←	←
112	JNT PIPE(SUB COOL HEX) A	9378773028	←	←
113	EXPANSION VALVE B ASSY	9378750050	←	←
114	VALVE(4-WAY) ASSY	9379052009	9379052016	←
115	PRESSURE PORT A ASSY	9378963016	←	←
116	PRESSURE PORT B ASSY	9378963023	←	←
117	JOINT PIPE OILSEPARATOR A ASSY	9378737068	←	9378737082
118	BYPASS VALVE A ASSY	9378744011	9378744035	9378744028
119	UNION JOINT	9970091018	←	←
120	SOLENOID 4WV	9970090011	←	←
121	OIL RETURN VALVE C ASSY	9378747029	←	9378747081
122	DISCHARGE PIPE A ASSY	9378888005	←	9378888029
123	SUCTION PIPE A ASSY	9378741003	←	←
124	DISCHARGE PIPE B ASSY	9378889002	←	9378889026
125	SUCTION PIPE B ASSY	9378741010	←	9378741027
126	OIL RETURN VALVE D ASSY	9378747036	←	9378747098
127	SUCTION PIPE C ASSY	9378742017	←	9378742048
128	OIL RETURN VALVE B ASSY	9378747012	←	9378747074
129	BRACKET SP ASSY	9379060004	←	←
130	OIL RETURN VALVE A ASSY	9378745018	←	9378745025
131	SOLENOID SV1	9970044052	←	←
132	SOLENOID SV2	9900189198	←	←
133	SOLENOID SV3	9900189204	←	←
134	SOLENOID SV5	9970044076	←	←
135	COIL(EXPANSION VALVE 1)	9970114007	←	←
136	COIL(EXPANSION VALVE 2)	9970101076	←	←
137	LOW PRESSURE SENSOR (Service unit)	9359064015	←	←
138	HIGH PRESSURE SENSOR (Service unit)	9359064008	←	←
139	PRESSURE SW (INV COMP)	9900504038	←	←
140	PRESSURE SW (AC COMP)	9900504021	←	9900504045
141	VALVE PLATE	9378466005	←	←
142	3WAY VALVE ASSY	9379039048	←	←
143	3WAY VALVE ASSY	9379039031	←	←
144	THERMISTOR (TH6,7,8,9) ASSY	9900506001	←	←
145	THERMISTOR (TH4,5) ASSY	9900507008	←	←
146	THERMISTOR (TH1,2,10) ASSY	9900806019	←	←
147	THERMISTOR (TH11)	9900804015	←	←
148	BELT HEATER (INV COMP)	9361140271	←	←
149	BELT HEATER (AC COMP)	9361140288	←	9361140318
150	COMP PLATE ASSY (AC COMP)	None	←	9380237006

	Description		Description
TH 1	Discharge temperature thermistor 1	TH 7	Liquid temperature thermistor 2
TH 2	Discharge temperature thermistor 2	TH 8	Sub-cool heat exchanger (inlet) thermistor
TH 4	Suction temperature thermistor	TH 9	Sub-cool heat exchanger (outlet) thermistor
TH 5	Heat exchanger (outlet) thermistor	TH10	Compressor 1 temperature thermistor
TH 6	Liquid temperature thermistor 1	TH11	Compressor 2 temperature thermistor

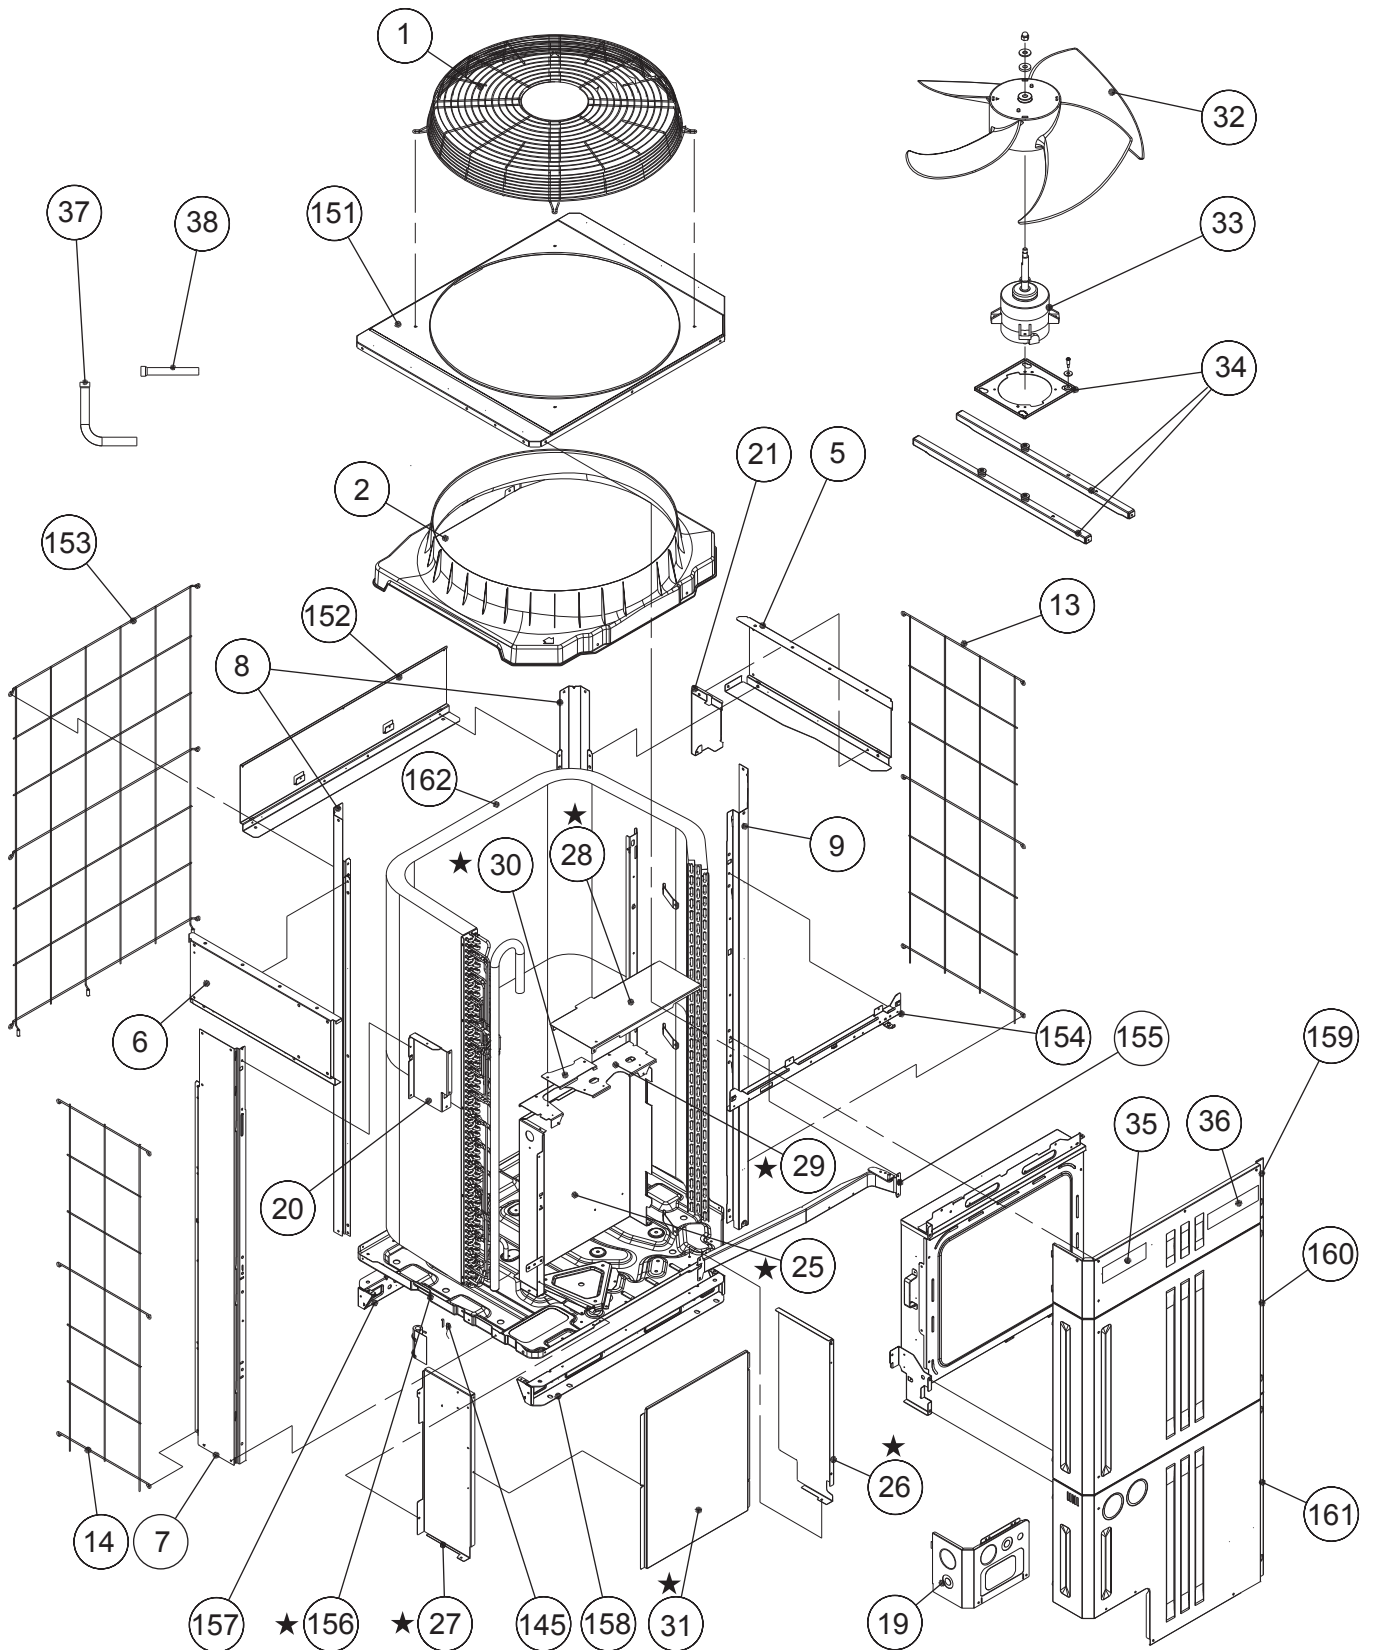

Caution :


"★" marked parts vary depending on "Revision code".

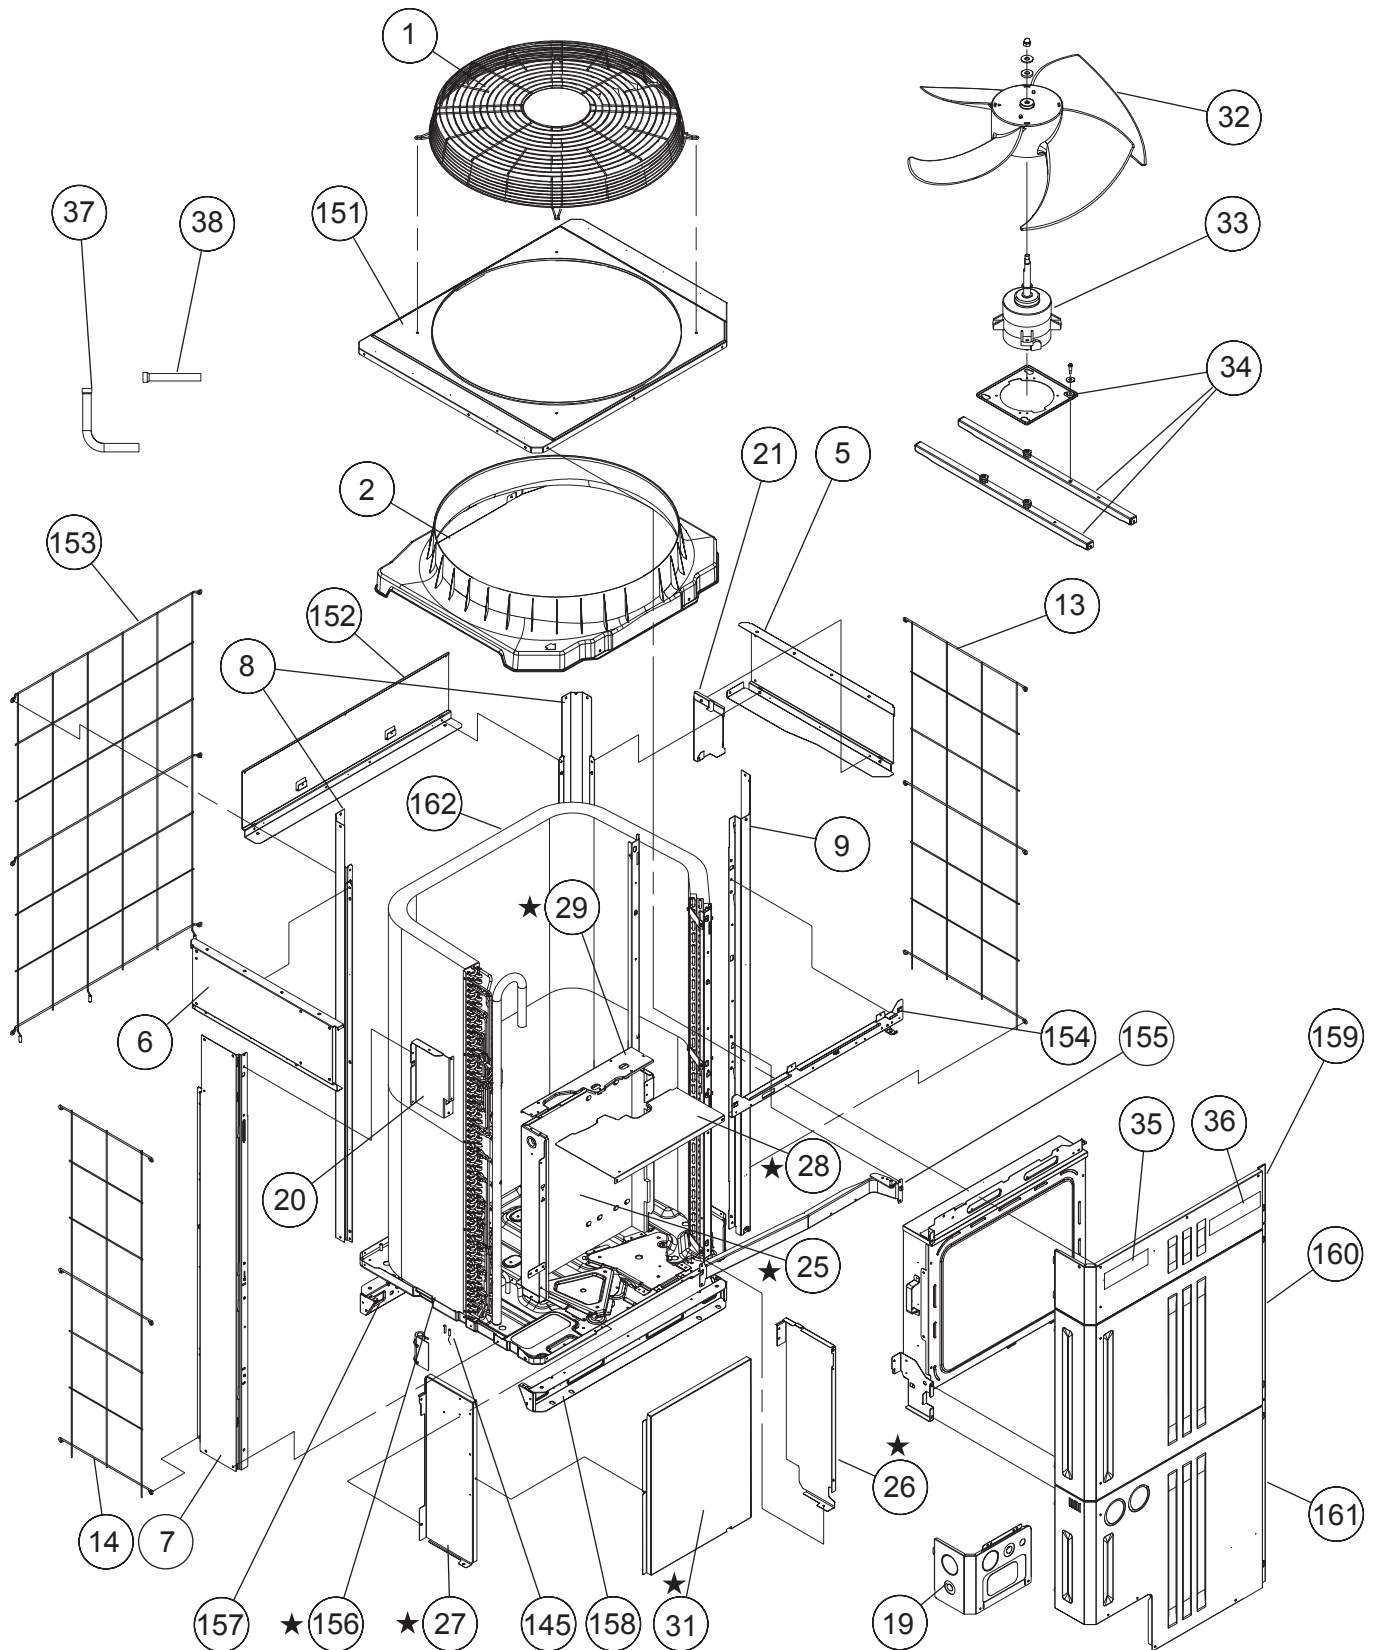


Caution :

"★" marked parts vary depending on "Revision code".

Model : AJ*108LALH (Revision Code : None & A & B)

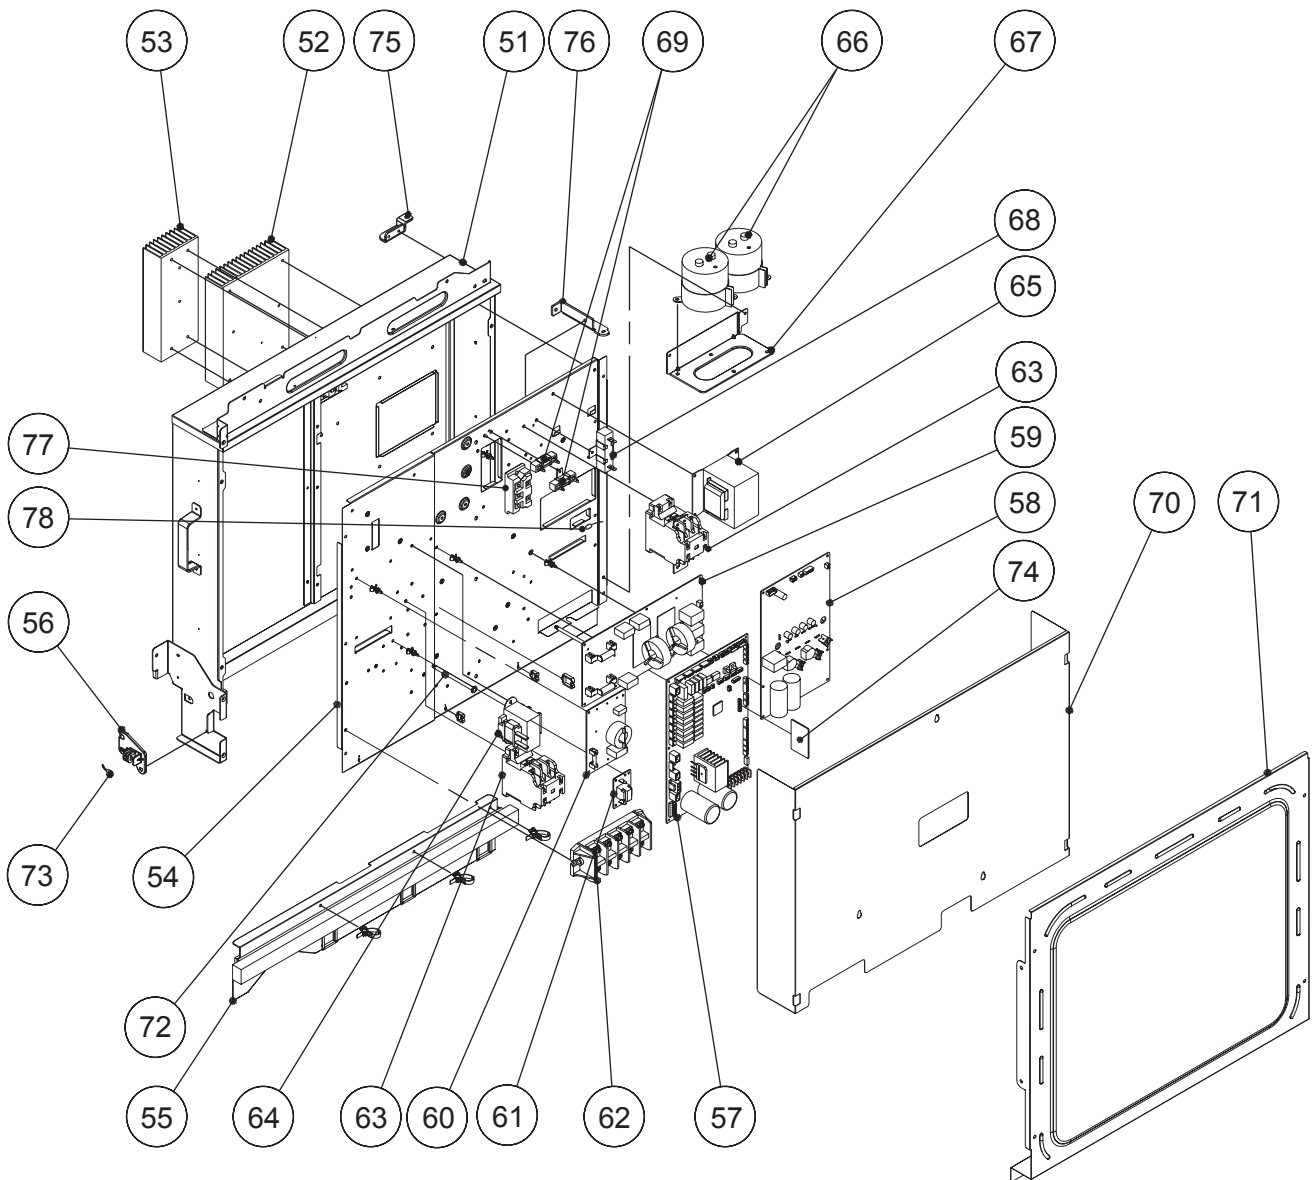


Model : AJ*108LALH (Revision Code : None & A)

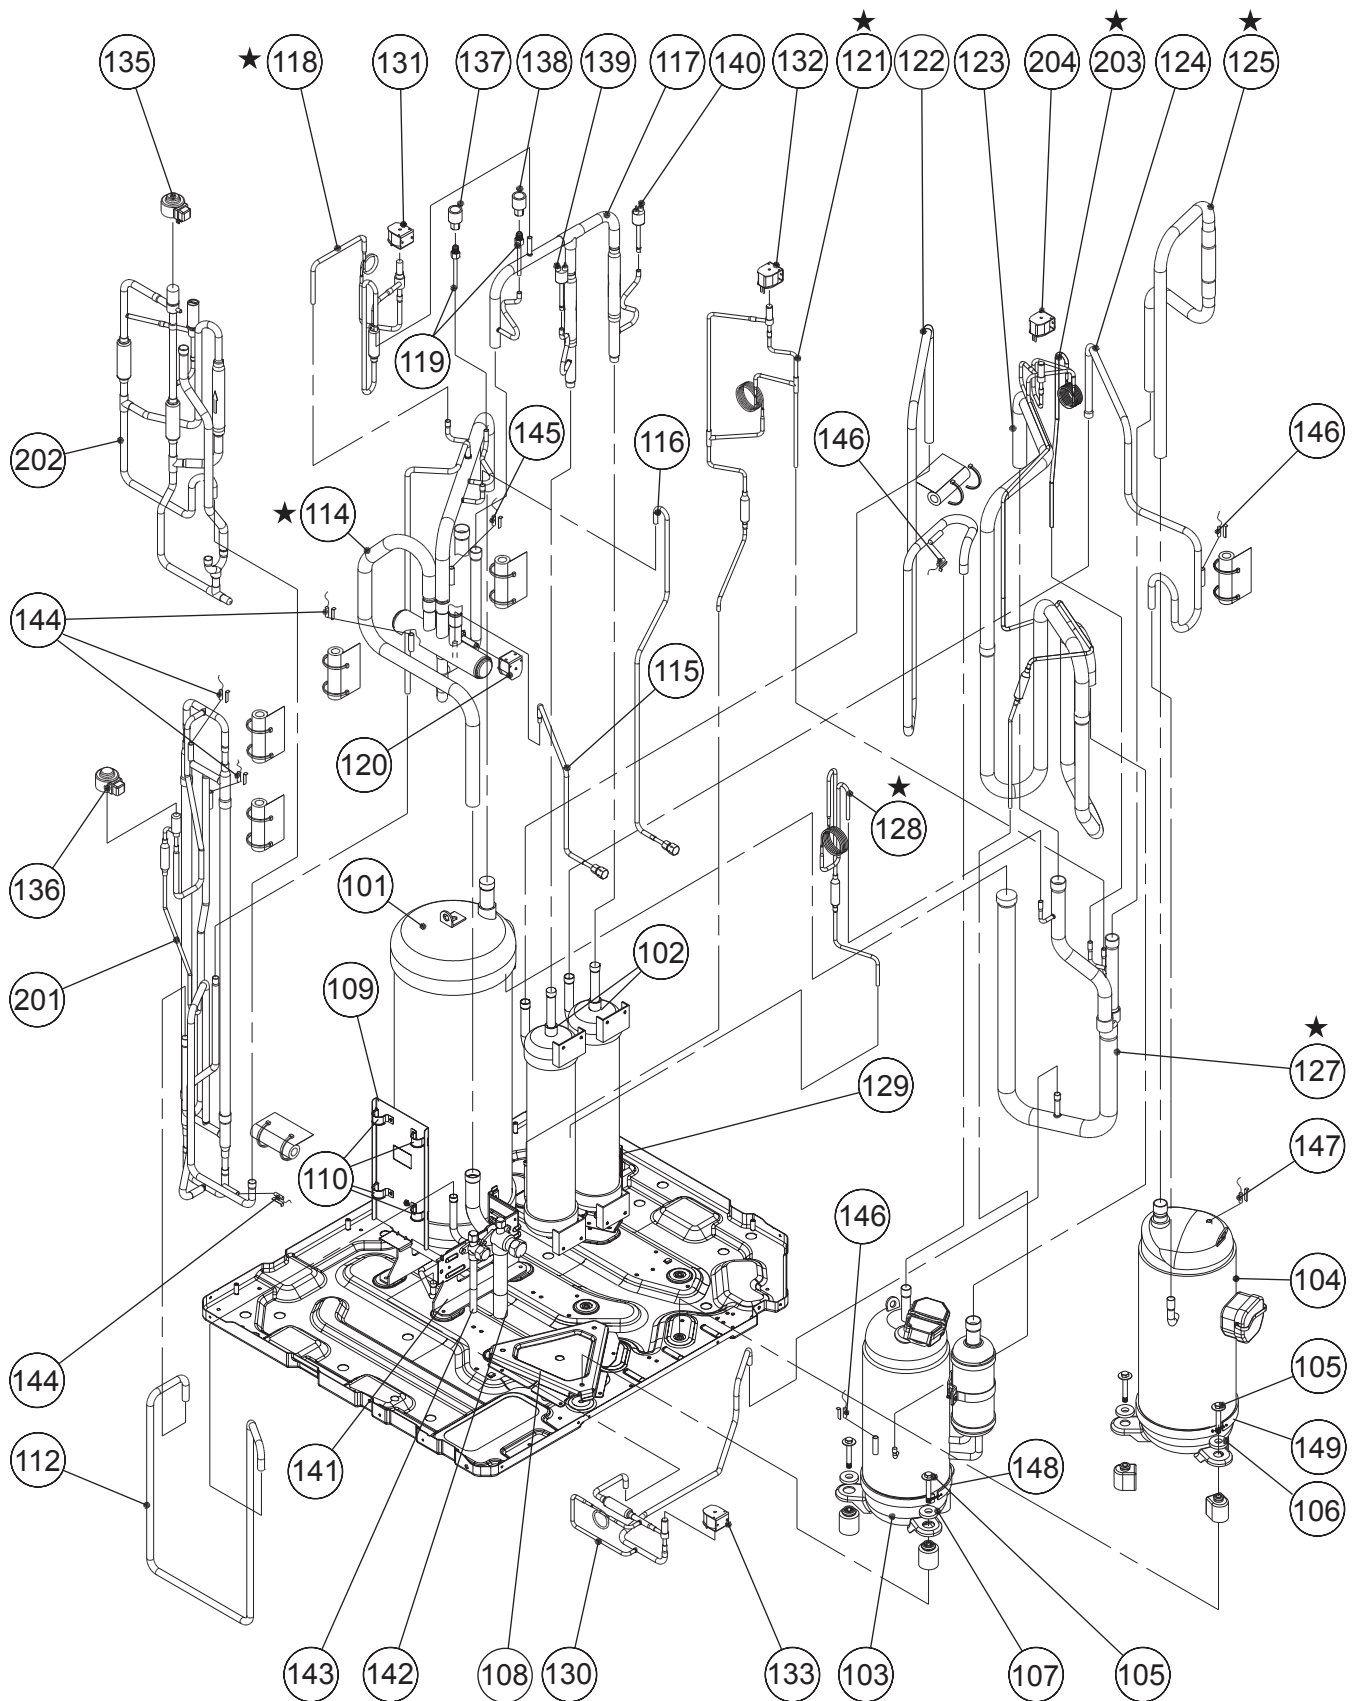

Caution :

"★" marked parts vary depending on "Revision code".

Model : AJ*108LALH (Revision Code : B)

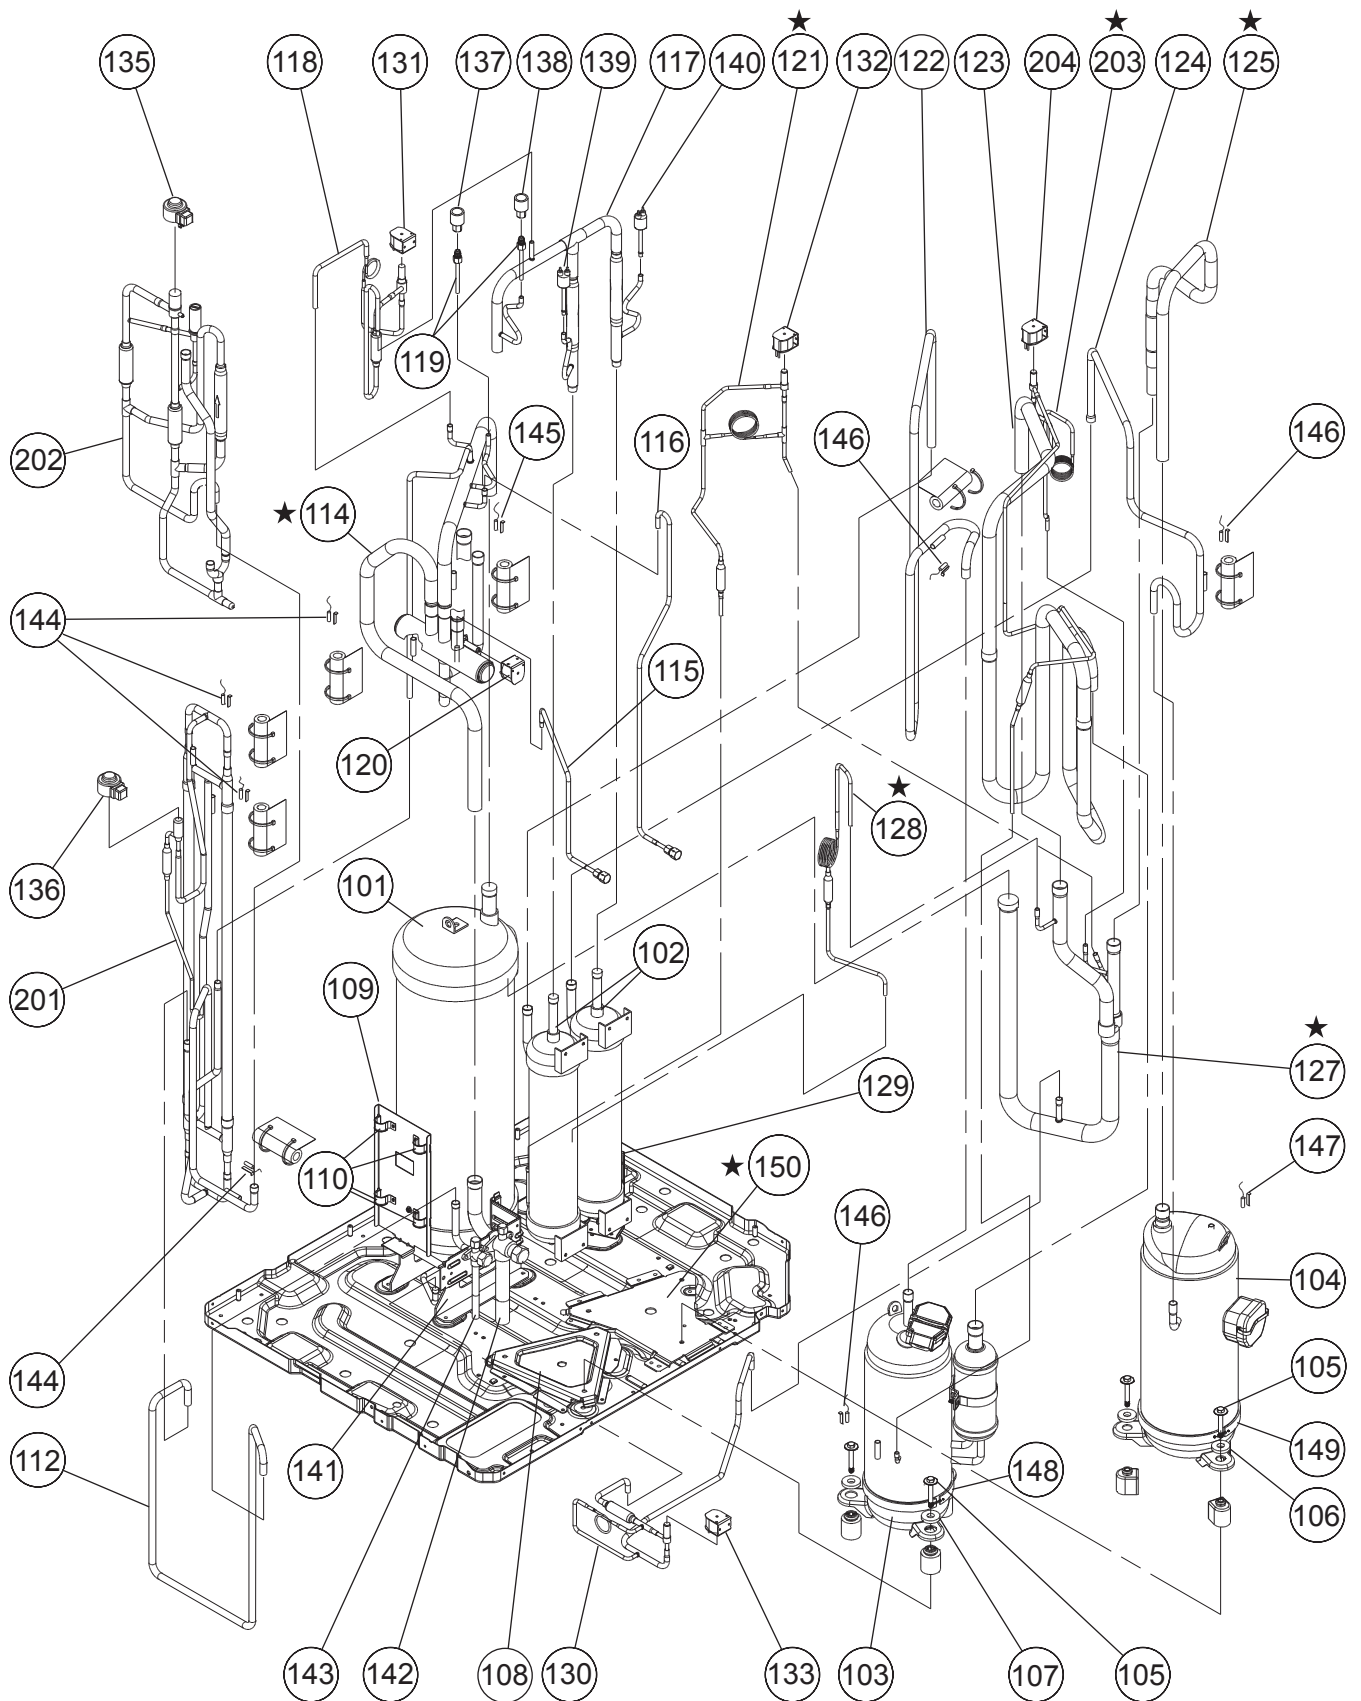

Caution :

"★" marked parts vary depending on "Revision code".

Model : AJ*108LALH (Revision Code : None & A & B)

Ref No.	Description	Part No.		
		Revision Code None	Revision Code A	Revision Code B
1	FAN GUARD	9378498006	←	←
2	BELL MOUTH	9379709002	←	←
5	RIGHT PANEL ASSY	9378920002	←	←
6	LEFT PANEL ASSY	9378919006	←	←
7	SIDE PILLER ASSY	9379202008	←	←
8	REAR PILLER	9378472006	←	←
9	MAIN PILLER	9378468009	←	←
13	NET RIGHT ASSY	9378927001	←	←
14	NET LEFT ASSY	9378928008	←	←
19	CONDUIT PLATE	9378493018	←	←
20	BRACKET BEAM	9378473003	←	←
21	BRKT CORNER ASSY	9378923003	←	←
25	COMP BOX BASE S ASSY	9378914018	←	9378914056
26	COMP BOX R ASSY	9378916005	←	9378916029
27	COMP BOX L ASSY	9378915008	←	9378915015
28	COMP BOX TOP ASSY	9378917002	←	9378917057
29	COMP BOX ROOF L ASSY	9379061001	←	9379061049
30	ROOF PLATE ASSY	9379203005	←	None
31	COMP BOX COVER ASSY	9378918009	←	None
	COMP BOX COVER	None	←	9378465015
32	PROPELLER FAN	9378488007	←	←
33	MOTOR,DC BRUSHLESS	9602663002	←	←
34	MOTOR BRKT ASSY	9378925007	←	←
35	LABEL(FUJITSU)	9380477006	←	←
	LABEL(GENERAL)	9378949003	←	←
36	LABEL(AIRSTAGE)	9380479000	←	←
37	ACCESSORY PIPE(GAS) A-L	9379200028	←	←
38	ACCESSORY PIPE(GAS) B-L	9379200004	←	←
151	TOP PANEL S	9378491014	←	←
152	REAR PANEL S ASSY	9378921016	←	←
153	NET REAR S ASSY	9378926011	←	←
154	FRONT BEAM S ASSY	9378922013	←	←
155	CENTER BEAM S ASSY	9378924017	←	←
156	BASE S ASSY	9378454019	←	9378454040
157	BASE FOOT RS ASSY	9378856035	←	←
158	BASE FOOT FS ASSY	9378856011	←	←
159	FRONT PANEL S	9378480018	←	←
160	S PANEL TOP S ASSY	9380231011	←	←
161	S PANEL BTM S ASSY	9380232018	←	←
162	CONDENSER S ASSY	9379053013	←	←

Model : AJ*108LALH (Revision Code : None & A & B)


Ref No.	Description	Part No.		
		Revision Code None	Revision Code A	Revision Code B
51	CONTROL BOX ASSY	9378500006	←	←
52	HEAT SINK B	9378511019	←	←
53	HEAT SINK C	9378511026	←	←
54	PCB PLATE	9378508019	←	←
55	WIRE PLATE ASSY	9378929043	←	←
56	THERMO HOLDER	9378510005	←	←
57	MAIN PCB ASSY	9707755015	←	←
58	INVERTER PCB ASSY (TRANSISTOR PCB ASSY)	9707952018	←	←
59	FILTER PCB(INV) ASSY	9707754018	←	←
60	FILTER PCB(MAIN) ASSY	9707753011	←	←
61	PWB UNIT(CT)	9707710014	←	←
62	TERMINAL	9900251031	←	←
63	MAGNETIC RELAY	9363277005	←	←
64	REACTOR(DC FAN) ASSY	9900468019	←	←
65	REACTOR(INV) ASSY	9900467012	←	←
66	CAPACITOR	9704268037	←	←
67	BRKT(CAPACITOR)	9379183000	←	←
68	RESISTOR,CEMENT	0200441016	←	←
69	RESISTOR,CEMENT	0200444017	←	←
70	PROTECT SHEET	9379181020	←	←
71	CNT COVER ASSY	9378930001	←	←
72	SCREW WASHER(STEP)	9379153010	←	←
73	OUTDOOR TEMP THERMISTOR	9900747015	←	←
74	COMMUNICATION PCB	9707774023	←	←
75	BRACKET HIG TOP	9378840003	←	←
76	BRACKET HIG BTM	9378845008	←	←
77	DIODE BRIDGE	0001113013	←	←
78	HEATSINK THERMISTOR	9900518004	←	←

Model : AJ*108LALH (Revision Code : None & A & B)

Ref No.	Description	Part No.		
		Revision Code None	Revision Code A	Revision Code B
101	ACCUMULATOR ASSY	9379221009	←	←
102	OIL SEPARATOR ASSY	9379038010	←	←
103	COMPRESSOR(INV) ASSY	9379228008	←	←
104	COMPRESSOR(AC) ASSY	9379228015	←	←
105	COMP BOLT	9378474017	←	←
106	WASHER(RUBBER) C	9379055000	←	←
107	WASHER(RUBBER) I	9379179003	←	←
108	COMP PLATE ASSY (INV COMP)	9379134019	←	←
109	BRACKET(SUB COOL HEX)	9378518018	←	←
110	CLAMP 19	9378519015	←	←
112	JNT PIPE(SUB COOL HEX) A	9378773028	←	←
114	VALVE(4-WAY) ASSY	9379052009	9379052016	←
115	PRESSURE PORT A ASSY	9378963016	←	←
116	PRESSURE PORT B ASSY	9378963023	←	←
117	JOINT PIPE OILSEPARATOR A ASSY	9378737068	←	←
118	BYPASS VALVE A ASSY	9378744011	9378744035	←
119	UNION JOINT	9970091018	←	←
120	SOLENOID 4WV	9970090011	←	←
121	OIL RETURN VALVE C ASSY	9378747029	←	9378747111
122	DISCHARGE PIPE A ASSY	9378888005	←	←
123	SUCTION PIPE A ASSY	9378741003	←	←
124	DISCHARGE PIPE B ASSY	9378889002	←	←
125	SUCTION PIPE B ASSY	9378741010	←	9378741034
127	SUCTION PIPE C ASSY	9378742017	←	9378742055
128	OIL RETURN VALVE B ASSY	9378747012	←	9378747104
129	BRACKET SP ASSY	9379060004	←	←
130	OIL RETURN VALVE A ASSY	9378745025	←	←
131	SOLENOID SV1	9970044052	←	←
132	SOLENOID SV2	9900189198	←	←
133	SOLENOID SV3	9900189204	←	←
135	COIL(EXPANSION VALVE 1)	9970114007	←	←
136	COIL(EXPANSION VALVE 2)	9970101076	←	←
137	LOW PRESSURE SENSOR	9359064015	←	←
138	(Service unit) HIGH PRESSURE SENSOR	9359064008	←	←
139	(Service unit) PRESSURE SW (INV COMP)	9900504038	←	←
140	PRESSURE SW (AC COMP)	9900504045	←	←
141	VALVE PLATE	9378466005	←	←
142	3WAY VALVE ASSY	9379039048	←	←
143	3WAY VALVE ASSY	9379039031	←	←
144	THERMISTOR (TH6,7,8,9) ASSY	9900506001	←	←
145	THERMISTOR (TH4,5) ASSY	9900507008	←	←
146	THERMISTOR (TH1,2,10) ASSY	9900806026	←	←
147	THERMISTOR (TH11)	9900804022	←	←
148	BELT HEATER (INV COMP)	9361140271	←	←
149	BELT HEATER (AC COMP)	9361140318	←	←
150	COMP PLATE ASSY (AC COMP)	None	←	9380239000
201	SUB COOL HEX A ASSY	9378749221	←	←
202	EXPANSION VALVE ASSY	9378750043	←	←
203	OIL RETURN VALVE E ASSY	9378748019	←	9378748026
204	SOLENOID SV6	9900189211	←	←

	Description		Description
TH 1	Discharge temperature thermistor 1	TH 7	Liquid temperature thermistor 2
TH 2	Discharge temperature thermistor 2	TH 8	Sub-cool heat exchanger (inlet) thermistor
TH 4	Suction temperature thermistor	TH 9	Sub-cool heat exchanger (outlet) thermistor
TH 5	Heat exchanger (outlet) thermistor	TH10	Compressor 1 temperature thermistor
TH 6	Liquid temperature thermistor 1	TH11	Compressor 2 temperature thermistor


Model : AJ*A90LALH (Revision Code : None)
AJ*A72LALH (Revision Code : None)

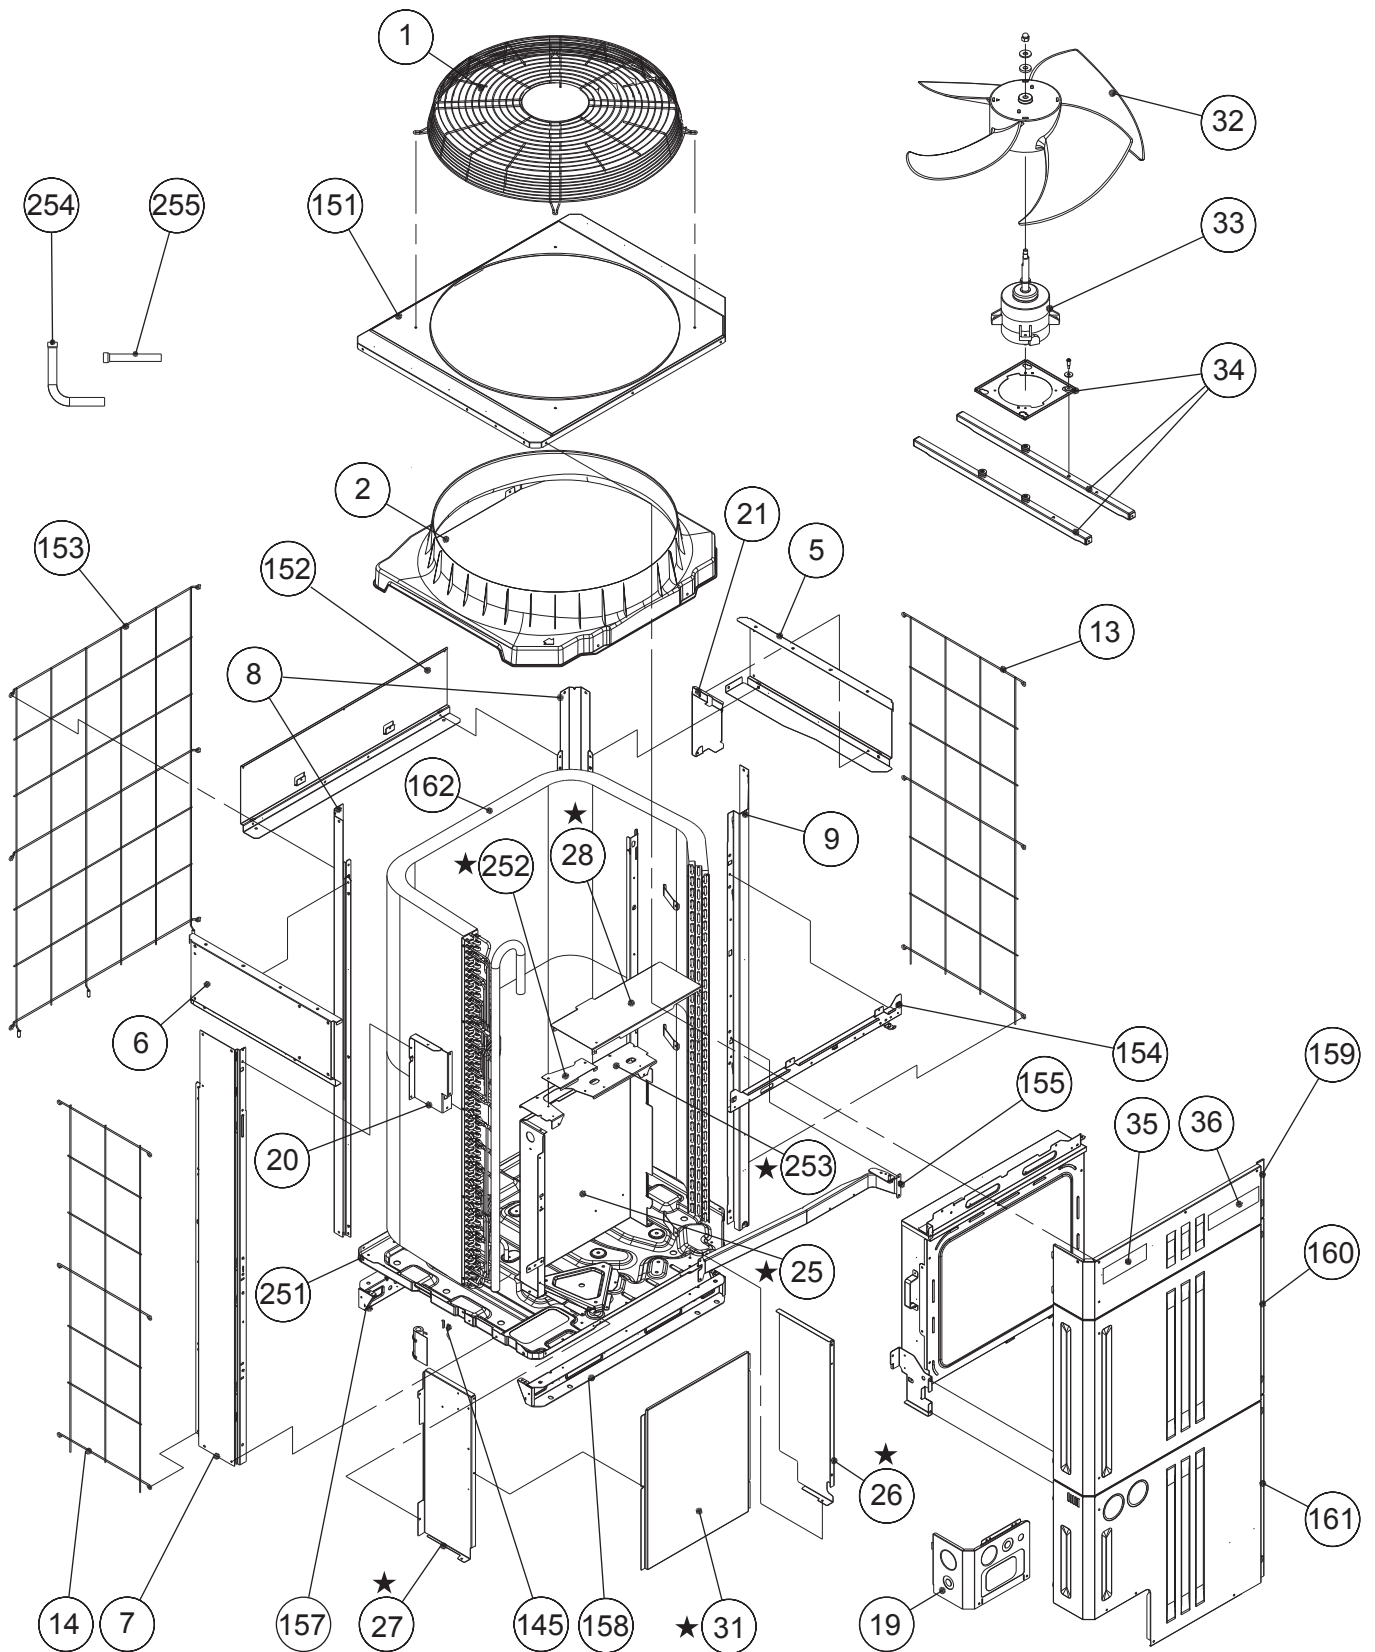

Caution :

"★" marked parts vary depending on "Revision code".


Model : AJ*A90LALH (Revision Code : A & B & C)
 AJ*A72LALH (Revision Code : A & B & C)

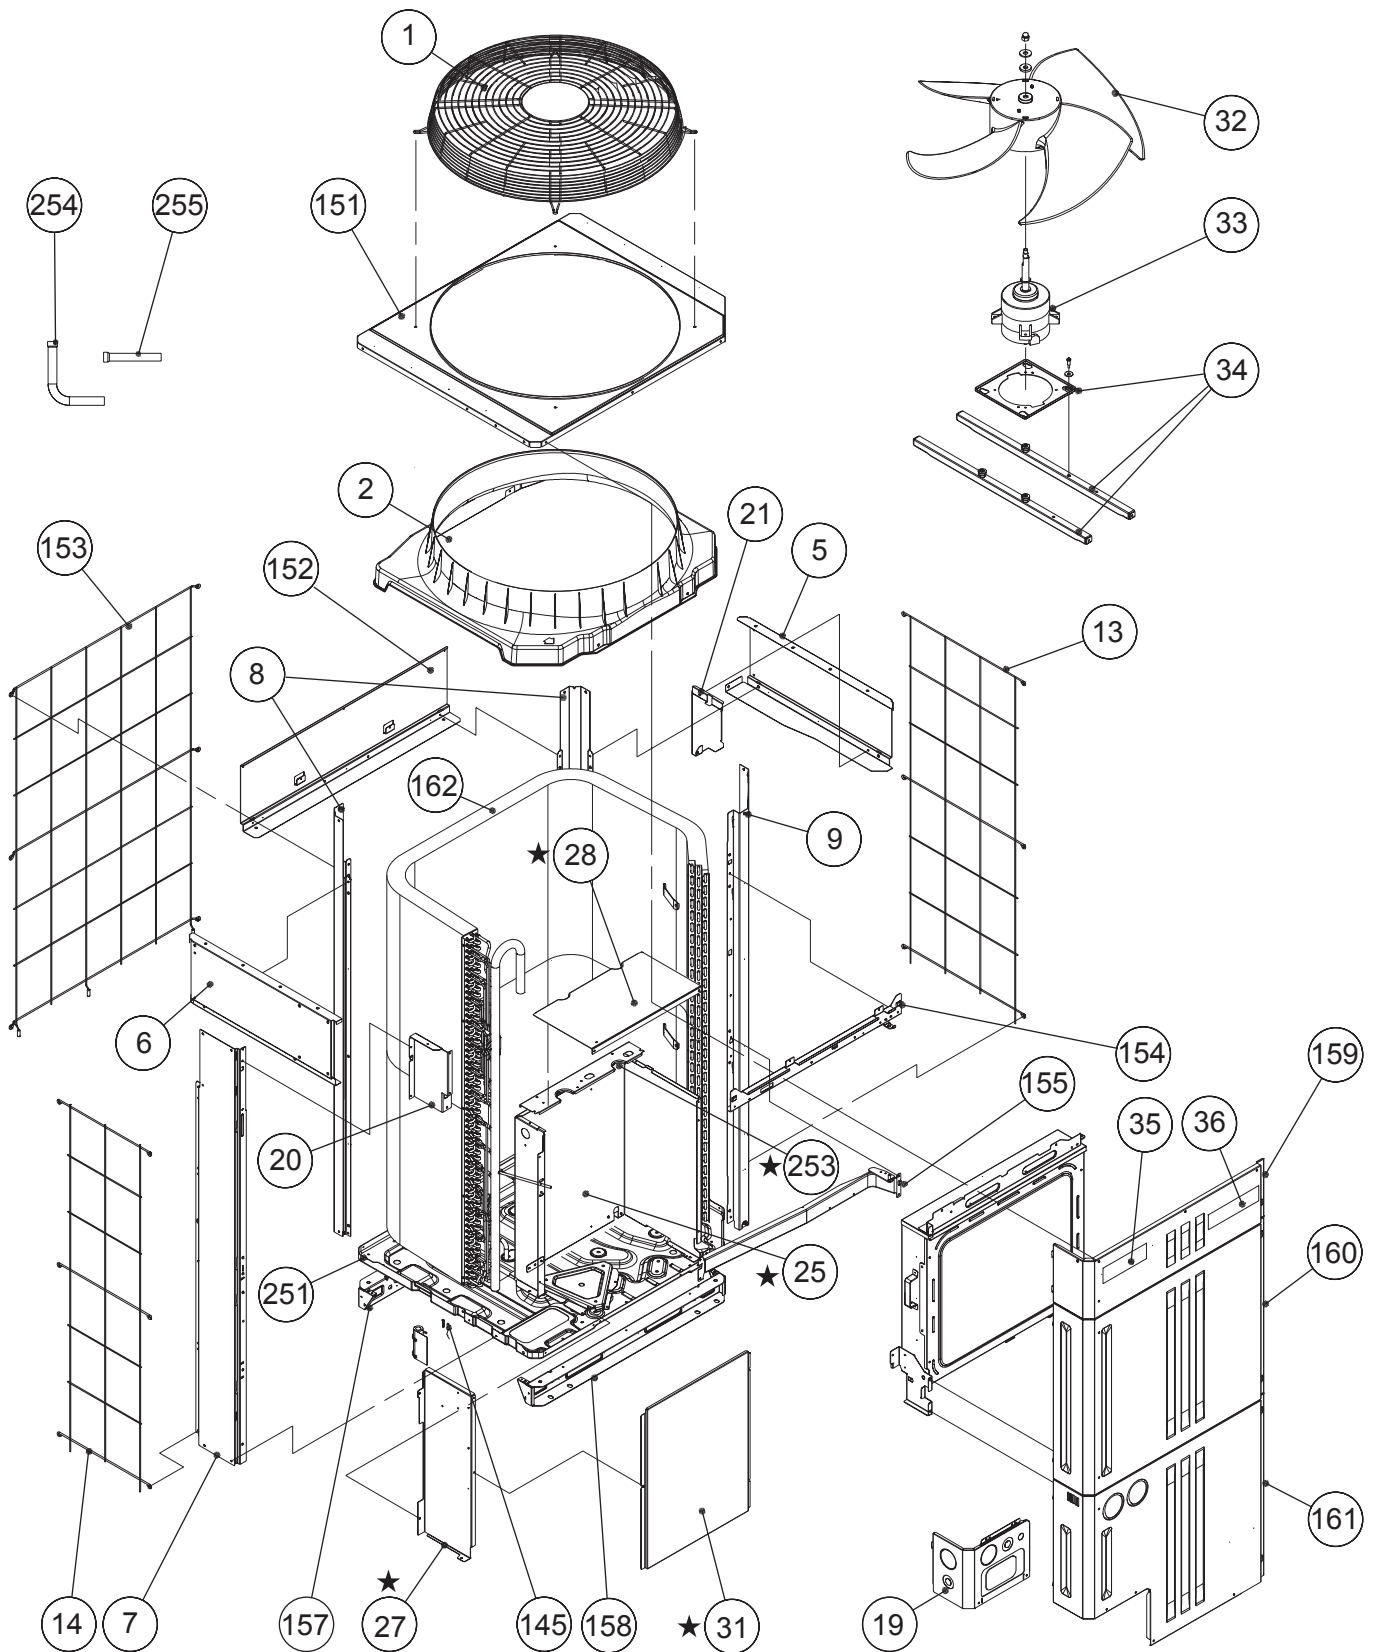

Caution :


"★" marked parts vary depending on "Revision code".

Model : AJ*A90LALH (Revision Code : None & A & B & C)
AJ*A72LALH (Revision Code : None & A & B & C)

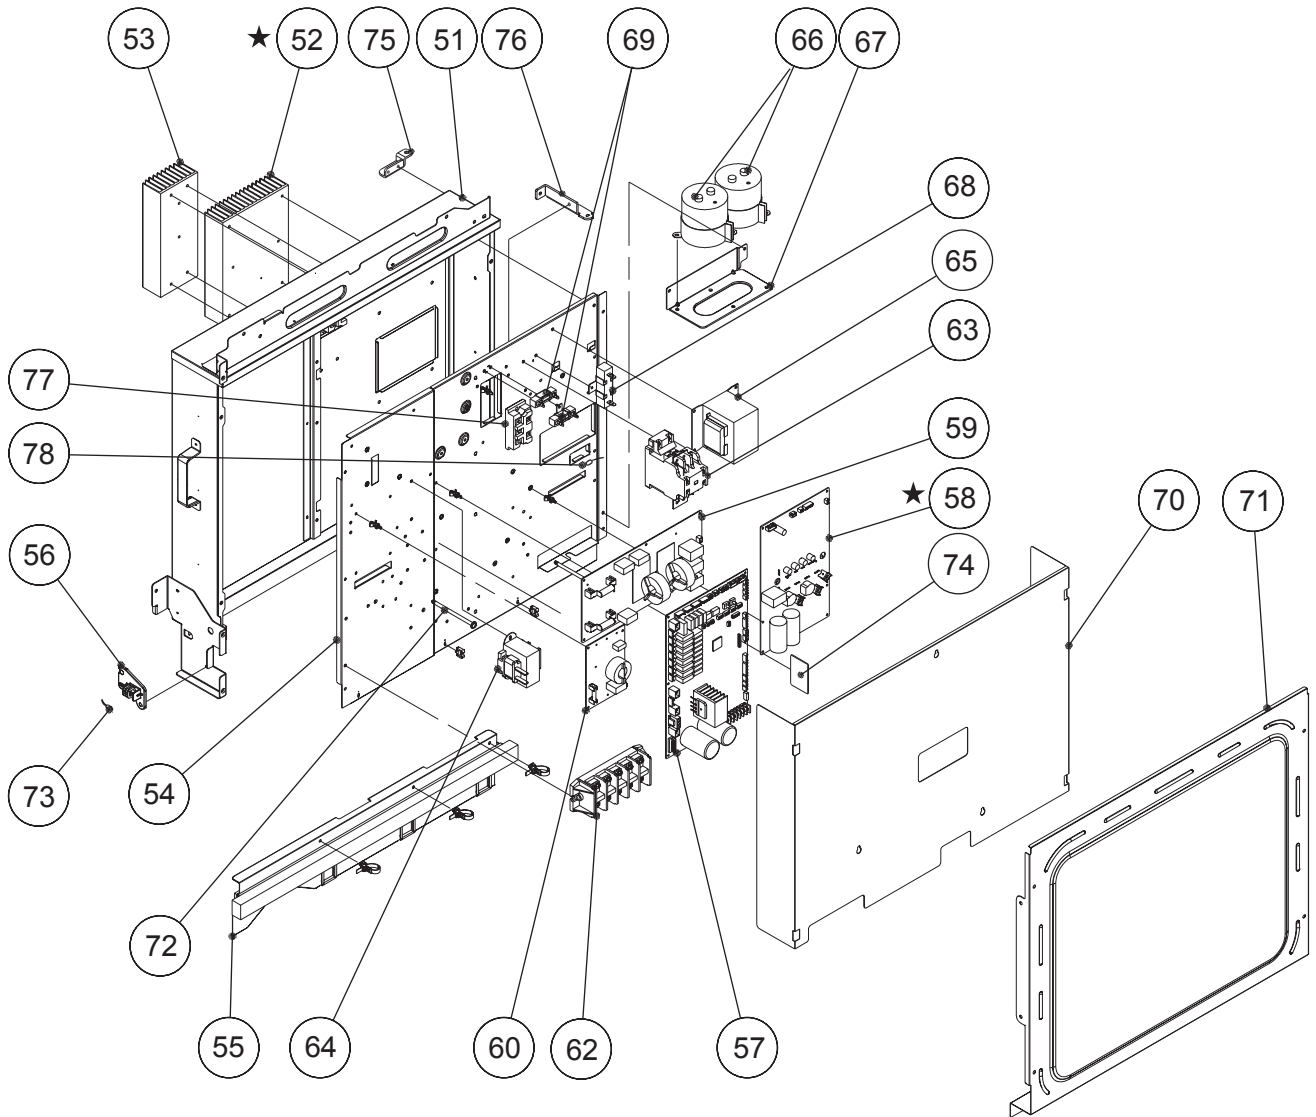

Caution :
"★" marked parts vary depending on "Revision code".


Model : AJ*A90LALH (Revision Code : None)
AJ*A72LALH (Revision Code : None)

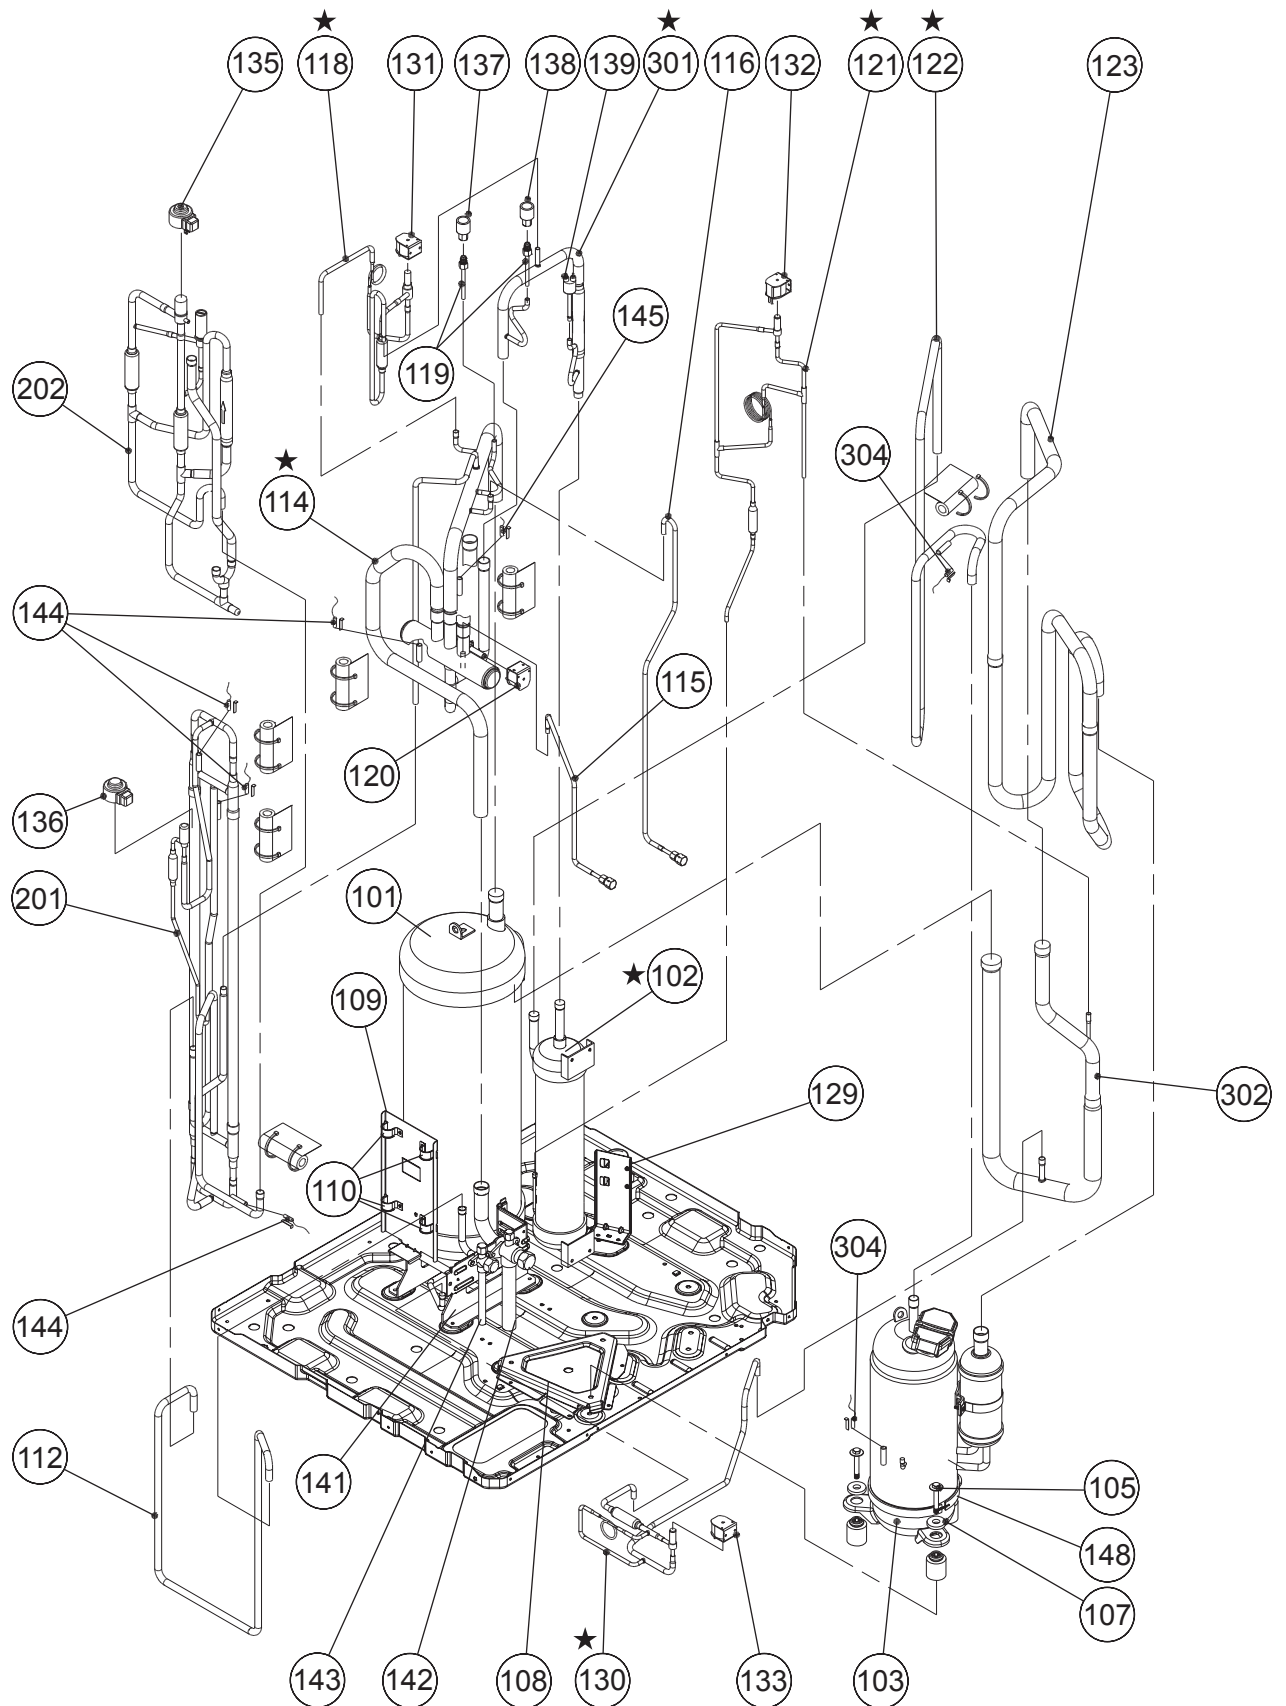

Caution :

"★" marked parts vary depending on "Revision code".

Model : AJ*A90LALH (Revision Code A & B & C)
 AJ*A72LALH (Revision Code A & B & C)

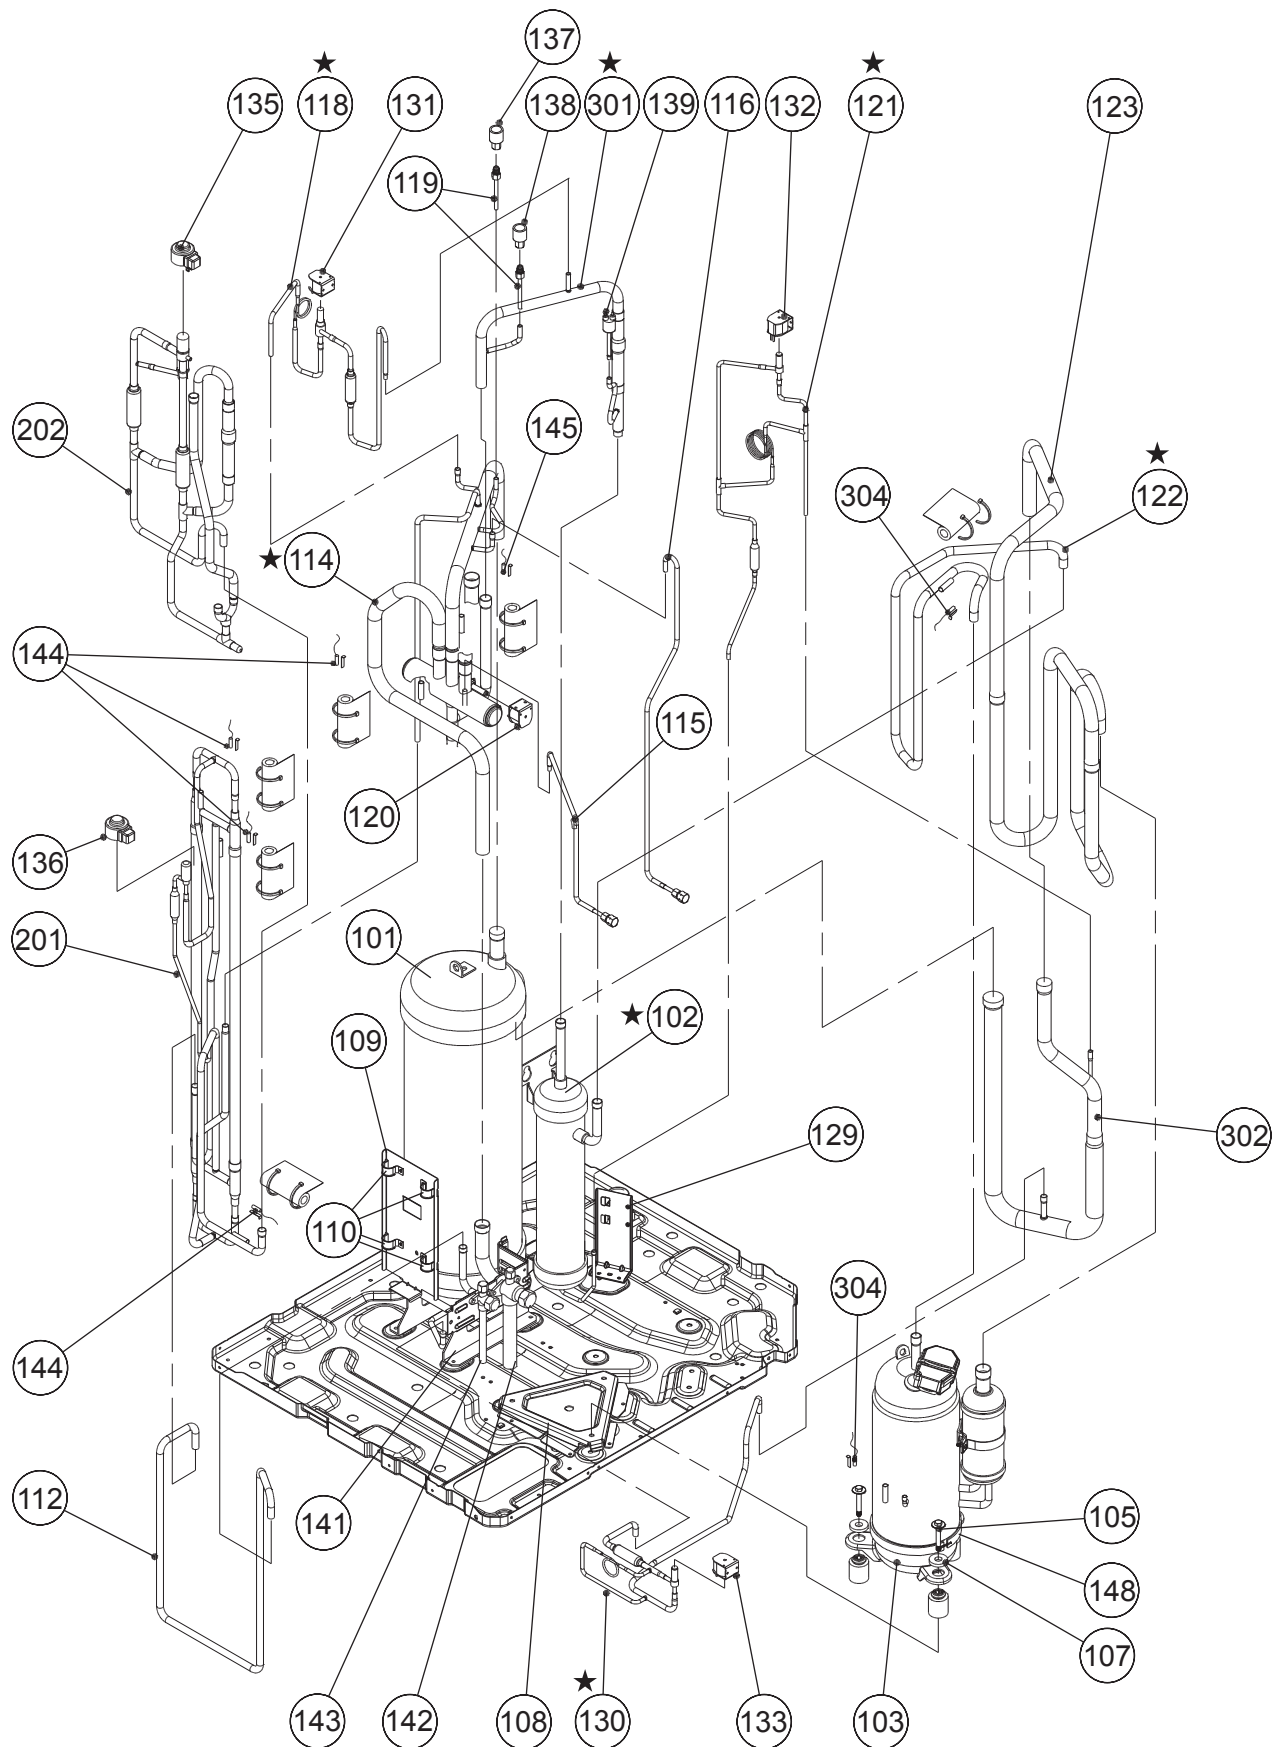

Caution :

"★" marked parts vary depending on "Revision code".

Model : AJ*A90LALH (Revision Code : None & A & B & C)
AJ*A72LALH (Revision Code : None & A & B & C)

Ref No.	Description	Part No.			
		Revision Code None	Revision Code A	Revision Code B	Revision Code C
1	FAN GUARD	9378498006	←	←	←
2	BELL MOUTH	9379709002	←	←	←
5	RIGHT PANEL ASSY	9378920002	←	←	←
6	LEFT PANEL ASSY	9378919006	←	←	←
7	SIDE PILLER ASSY	9379202008	←	←	←
8	REAR PILLER	9378472006	←	←	←
9	MAIN PILLER	9378468009	←	←	←
13	NET RIGHT ASSY	9378927001	←	←	←
14	NET LEFT ASSY	9378928008	←	←	←
19	CONDUIT PLATE	9378493018	←	←	←
20	BRACKET BEAM	9378473003	←	←	←
21	BRKT CORNER ASSY	9378923003	←	←	←
25	COMP BOX BASE S ASSY	9378914018	9378914032	←	←
26	COMP BOX R ASSY	9378916005	None	←	←
27	COMP BOX L ASSY	9378915008	9378915015	←	←
28	COMP BOX TOP ASSY	9378917002	9378917033	←	←
31	COMP BOX COVER ASSY	9378918009	9378465015	←	←
32	PROPELLER FAN	9378488007	←	←	←
33	MOTOR,DC BRUSHLESS	9602663002	←	←	←
34	MOTOR BRKT ASSY	9378925007	←	←	←
35	LABEL(FUJITSU)	9380477006	←	←	←
	LABEL(GENERAL)	9378949003	←	←	←
36	LABEL(AIRSTAGE)	9380479000	←	←	←
151	TOP PANEL S	9378491014	←	←	←
152	REAR PANEL S ASSY	9378921016	←	←	←
153	NET REAR S ASSY	9378926011	←	←	←
154	FRONT BEAM S ASSY	9378922013	←	←	←
155	CENTER BEAM S ASSY	9378924017	←	←	←
157	BASE FOOT RS ASSY	9378856035	←	←	←
158	BASE FOOT FS ASSY	9378856011	←	←	←
159	FRONT PANEL S	9378480018	←	←	←
160	S PANEL TOP S ASSY	9380231011	←	←	←
161	S PANEL BTM S ASSY	9380232018	←	←	←
162	CONDENSER S ASSY	9379053013	←	←	←
251	BASE S ASSY	9378454040	←	←	←
252	ROOF PLATE S ASSY	9379203012	None	←	←
253	COMP BOX ROOF S ASSY	9379061018	9379061025	←	←
254	ACCESSORY PIPE(GAS) A	9379200011	←	←	←
255	ACCESSORY PIPE(GAS) B	9379200035	←	←	←

Model : AJ*A90LALH (Revision Code : None & A & B & C)
AJ*A72LALH (Revision Code : None & A & B & C)

Ref No.	Description	Part No.			
		Revision Code None	Revision Code A	Revision Code B	Revision Code C
51	CONTROL BOX ASSY	9378500006	←	←	←
52	HEAT SINK B	9378511019	←	←	None
	HEAT SINK D	None	←	←	9378511033
53	HEAT SINK C	9378511026	←	←	←
54	PCB PLATE	9378508019	←	←	←
55	WIRE PLATE ASSY	9378929043	←	←	←
56	THERMO HOLDER	9378510005	←	←	←
57	MAIN PCB ASSY	9707755015	←	←	←
58	INVERTER PCB ASSY (TRANSISTOR PCB ASSY)	9707952018	←	←	9708737010
59	FILTER PCB(INV) ASSY	9707754018	←	←	←
60	FILTER PCB(MAIN) ASSY	9707753011	←	←	←
62	TERMINAL	9900251031	←	←	←
63	MAGNETIC RELAY	9363277005	←	←	←
64	REACTOR(DC FAN) ASSY	9900468019	←	←	←
65	REACTOR(INV) ASSY	9900467012	←	←	←
66	CAPACITOR	9709615010	←	←	←
67	BRKT(CAPACITOR)	9379183000	←	←	←
68	RESISTOR,CEMENT	0200441016	←	←	←
69	RESISTOR,CEMENT	0200444017	←	←	←
70	PROTECT SHEET	9379181020	←	←	←
71	CNT COVER ASSY	9378930001	←	←	←
72	SCREW WASHER(STEP)	9379153010	←	←	←
73	OUTDOOR TEMP THERMISTOR	9900747015	←	←	←
74	COMMUNICATION PCB	9707774023	←	←	←
75	BRACKET HIG TOP	9378840003	←	←	←
76	BRACKET HIG BTM	9378845008	←	←	←
77	DIODE BRIDGE	0001113013	←	←	←
78	HEATSINK THERMISTOR	9900518004	←	←	←

Model : AJ*A90LALH (Revision Code : None & A & B & C)
AJ*A72LALH (Revision Code : None & A & B & C)

Ref No.	Description	Part No.			
		Revision Code None	Revision Code A	Revision Code B	Revision Code C
101	ACCUMULATOR ASSY	9379221009	←	←	←
102	OIL SEPARATOR ASSY	9379038010	9379677004	←	←
103	COMPRESSOR(INV) ASSY	9379228008	←	←	←
105	COMP BOLT	9378474017	←	←	←
107	WASHER(RUBBER)I	9379179003	←	←	←
108	COMP PLATE ASSY	9379134019	←	←	←
109	BRACKET(SUB COOL HEX)	9378518018	←	←	←
110	CLAMP 19	9378519015	←	←	←
112	JNT PIPE(SUB COOL HEX)A	9378773028	←	←	←
114	VALVE(4-WAY)ASSY	9379052009	9379052016	←	←
115	PRESSURE PORT A ASSY	9378963016	←	←	←
116	PRESSURE PORT B ASSY	9378963023	←	←	←
118	BYPASS VALVE A ASSY	9378744011	9378744028	←	←
119	UNION JOINT	9970091018	←	←	←
120	SOLENOID 4WV	9970090011	←	←	←
121	OIL RETURN VALVE C ASSY	9378747029	9378747050	←	←
122	DISCHARGE PIPE A ASSY	9378888005	9378888029	←	←
123	SUCTION PIPE A ASSY	9378741003	←	←	←
129	BRACKET SP ASSY	9379060004	←	←	←
130	OIL RETURN VALVE A ASSY	9378745018	9378745025	←	←
131	SOLENOID SV1	9970044052	←	←	←
132	SOLENOID SV2	9900189198	←	←	←
133	SOLENOID SV3	9900189204	←	←	←
135	COIL(EXPANSION VALVE 1)	9970114007	←	←	←
136	COIL(EXPANSION VALVE 2)	9970101076	←	←	←
137	LOW PRESSURE SENSOR (Service unit)	9359064015	←	←	←
138	HIGH PRESSURE SENSOR (Service unit)	9359064008	←	←	←
139	PRESSURE SW (INV COMP)	9900504038	←	←	←
141	VALVE PLATE	9378466005	←	←	←
142	3WAY VALVE ASSY	9379039048	←	←	←
143	3WAY VALVE ASSY	9379039031	←	←	←
144	THERMISTOR (TH6,7,8,9) ASSY	9900506001	←	←	←
145	THERMISTOR (TH4,5) ASSY	9900507008	←	←	←
148	BELT HEATER (INV COMP)	9361140271	←	←	←
201	SUB COOL HEX A ASSY	9378749221	←	←	←
202	EXPANSION VALVE ASSY	9378750043	←	←	←
301	JOINT PIPE OILSEPARATOR B ASSY	9378737075	9378737044	←	←
302	SUCTION PIPE D ASSY	9378742024	←	←	←
304	THERMISTOR (TH1,10) ASSY	9900805012	←	←	←

	Description
TH 1	Discharge temperature thermistor 1
TH 4	Suction temperature thermistor
TH 5	Heat exchanger (outlet) thermistor
TH 6	Liquid temperature thermistor 1
TH 7	Liquid temperature thermistor 2
TH 8	Sub-cool heat exchanger (inlet) thermistor
TH 9	Sub-cool heat exchanger (outlet) thermistor
TH10	Compressor 1 temperature thermistor